

HITACHI FULLY AUTOMATIC WASHING MACHINE  
日立全自動洗衣機

**Model AJ-S70KXP  
AJ-S65KXP  
AJ-S70KX**



Thank you for your purchase of HITACHI Fully Automatic Washing Machine.

- Please read this manual carefully for proper operation.
- Please keep this manual for future reference.


承蒙您選購日立的全自動洗衣機，謹此致衷心謝意。

- 請細閱本說明書，以便正確使用本洗衣機。
- 閱讀完畢，請妥善保存本說明書，以備將來查閱。

# CONTENTS

## 目錄

Preface 前言 .....	3
Safety Precautions 安全方面的注意事項 .....	4
Installation Guide 安裝指南 .....	7
Installation 安裝 .....	13
Safety Check 安全檢查 .....	14
Washing Machine Repair 洗衣機修理事宜 .....	14
Technical Description 各部件名稱 .....	15
Control Panel 控制面板 .....	16
Before Using Your Machine 開始洗衣前 .....	19
Checking Amount of Laundry and Detergent (Approximately Amount) 檢測洗衣量和洗衣粉量(大致用量) .....	20
How to Use Liquid Detergent, Bleach and Fabric Softener 洗衣粉、漂白劑、柔軟劑的使用方法 .....	21
Amount of Laundry and Detergent 洗衣量和洗衣粉量 .....	23
Selection of Laundry Process 洗衣程序的選擇方法 .....	24
Content of Laundry Process 洗衣程序的內容 .....	26
Process Description 各程序的說明 .....	27
Using the PRESET for Washing 預校時間洗衣 .....	31
Using the Detergent Again 再次使用洗衣液 .....	32
Using the Washing Cap 使用洗衣蓋 .....	33
AIR-JET Process 風乾程序 .....	35
Washing in Your Favorite Way 按照您喜歡的方式進行洗衣 .....	38
Use Guidelines 使用中的注意事項 .....	40
CLEAN Process 清潔程序 .....	41
TUB DRY Process 筒風乾程序 .....	42
Maintenance and Repair 維護保養方法 .....	43
When Failure Happens 有故障發生時 .....	46
Optional Parts 另售部件 .....	52
Product Specifications 產品規格 .....	52

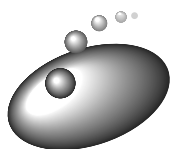

## Preface 前言


☞ The number next to the sign is the page number for detailed description.  
後面的數字表示具體說明的頁數。

### Air-jet drying 空氣噴射乾燥

**It's an economic mode of drying without heating.**

無需進行加熱的節能乾燥方式。

- May be used to dry the heat-irresistible swimsuit or the underwear containing the amino heat-insulation materials.  
可乾燥不耐熱的泳衣或含氨基隔熱材料的內衣。
- Keep room free of mugginess for causing no temperature rise.  
由於溫度不上升，房間不會悶熱。
- Control the black mildew.  
抑制洗衣槽的黑色霉菌。

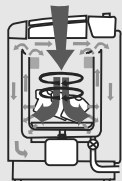

※ The drying capacity can be as high as 2kg.  
乾燥容量可達2kg。

※ The duration is irrelevant to the dryness level for applying the timer mode of drying.  
採用定時乾燥方式，結束時間與乾燥程度無關。

Please read "USER MANUAL" carefully for proper operation. (☞ 35)  
請仔細閱讀“使用說明書”，以便您能正確使用。(☞ 35)

### Infiltration washing 滲透清洗

**Infiltrate the detergent inside the cloth to detach the dirt off the cloth fiber.**

使洗衣粉滲入到衣料內部，使污垢從布料纖維上脫落。

The detergent dissolves sufficiently to become the high-concentration detergent that washes the laundry in infiltration mode for easier detachment of dirt off the cloth fiber.

洗衣粉充分溶解，形成高濃度洗衣液，對衣物進行滲透清洗，使污垢更易從布料纖維上分離。

- 1** Put detergent in, adding some water  
加入洗衣粉，供給少量水  
The detergent put in at the injection opening will fall below the pulsator.  
從注入口加入的洗衣粉將落在攪拌翼下方，並注入少量水。
- 2** Make the detergent dissolves fast by rotating the spinning basket.  
通過脫水桶旋轉加速洗滌劑溶解
- 3** The detergent dissolves inside the cloth  
溶解洗衣粉使其滲入衣物  
The concentrated detergent dissolves with the power agitating of pulsator, and infiltrates sufficiently inside the cloth.  
濃縮洗衣粉在攪拌翼強力攪拌下溶解，充分滲透到衣物內部。
- 4** THREE-STEP washing  
三步洗衣  
Inject a little water, and the dirt will detach with the high-concentration detergent; inject more water to the normal water level for washing.  
加入少量水，污垢在高濃度洗衣液下脫落，再加水到通常水位處進行洗衣。



※ Please use concentrated powder detergent to wash.  
請使用濃縮合成粉末洗衣粉進行洗衣。

The infiltration washing can't be performed to the processes of "DELICATE", "BLANKET" and "CLEAN". (Because of no detergent dissolution course in these processes)  
『毛絨』、『被毯』、『清潔』程序不能進行滲透清洗。(因為沒有溶解洗衣劑的過程)

### Laundry rearrangement and spinning 理衣脫水

**Loosen the post-spinning laundry for easy taking out. 疏鬆脫水後的衣物，使之易於取出。**




- ※ The laundry rearrangement may be out of service in the case that the washing capacity is less than 1kg or more than 5kg.  
洗衣量不足1kg或超過5kg時，有可能無法進行理衣程序。
- ※ The laundry rearrangement doesn't perform in the case of manual setup of "RINSE", "SPIN" or "SPIN ONLY".  
手動設定“沖洗”、“脫水”或“只脫水”等時，不進行理衣程序。

### To purchase AJ-S65KXP, AJ-S70KX users 致購買 AJ-S65KXP，AJ-S70KX 的用戶

AJ-S65KXP highest level is the [58L], AJ-S70KX is not on drains water, with the exception of the use of other methods of addition is basically the same. So AJ-S65KXP, AJ-S70KX use the AJS70KXP illustrations to explain the statement.

AJ-S65KXP 最高水位為「58L」，AJ-S70KX 不是上排水機型，除此外其它的使用方法基本相同。所以 AJ-S65KXP，AJ-S70KX 機型使用 AJ-S70KXP 說明書的解說插圖。

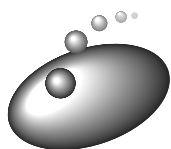



# Safety Precautions




## 安全方面的注意事項

Please read this part of substance carefully for proper operation before using your machine.

使用之前，請仔細閱讀這部分的內容，以便正確使用。

- ★ The precautions stated here are classified as "Warning" and "Attention" according to the damage and the emergency caused by misoperation, and are described respectively in line with the marks below  
這裏所說的注意事項根據誤操作而引起的傷害大小以及緊迫程度，分為“警告”和“注意”兩種，並且按照以下標識進行區分說明

	<b>Warning</b> <b>警告</b>	With no respect to this mark, the misoperation may cause death or GBH. 表示如果無視此標記，誤操作後，可能引起死亡或重傷事故。
	<b>Attention</b> <b>注意</b>	With no respect to this mark, the misoperation may cause body harm or object damage. 表示如果無視此標記，誤操作後，可能引起人身傷害或物體損壞事故。

<b>Graphic mark</b> <b>圖形例子</b>		This mark indicates the content of warning or attention. 表示敦促警告及需要注意的內容。
		This mark indicates the prohibited action. 表示禁止行為。
		This mark indicates the compulsory action to be carried out. 表示必須執行的強制行為。

### Warning 警告

 <p><b>Dismantle, repair or alterations should only carried out by professional technicians.</b> 除指定的專業維修人員外，應絕對禁止他人拆卸、修理或改裝洗衣機。</p> <ul style="list-style-type: none"> <li>Avoid electric shock, fire, and body injury due to improper activity. 避免因不恰當行為而導致觸電、火災及人身傷害。</li> </ul>	 <p><b>Please use the single socket with 220V, 10A specification.</b> 請單獨使用額定值為交流 220V、10A 以上容量的電源插座。</p> <ul style="list-style-type: none"> <li>The share of the same socket with other electric appliances may cause fire due to excessive heat. 若與其他電器設備共用同一插座，可能因異常發熱而導致火災事故。</li> </ul> 
 <p><b>This washing machine is equipped with the electricity wire with bi-electrode grounding plug, please use the bi-electrode grounding socket. The creepage protector shall be used if possible.</b> 本品採用二極接地插頭電源線，請使用二極接地電源插座。可能的話，最好使用漏電保護器。</p> <ul style="list-style-type: none"> <li>To prevent electricity leak which may cause injuries. 避免因漏電故障引起傷害。</li> </ul>	 <p><b>Washing machine should not be installed in humid place or in places exposed to wind and rain.</b> 請勿將洗衣機安裝在潮濕或容易受到風吹雨淋的地方。</p>  <ul style="list-style-type: none"> <li>Otherwise, electricity leak causing electric shock or fire may occur. 避免觸電或因漏電而引發火災事故。</li> </ul>
 <p><b>Electricity supply must be unplugged with dry hands.</b> 嚴禁使用濕手插拔電源插頭。</p>  <ul style="list-style-type: none"> <li>Otherwise, this may cause electric shock. 否則可能導致觸電事故。</li> </ul>	 <p><b>Do not put water in direct contact with the unit during maintenance and repair.</b> 進行保養時，請勿直接將水淋灑在洗衣機的各個部位。</p>  <ul style="list-style-type: none"> <li>This may cause short circuit or electric shock. 否則可能造成短路而導致觸電事故。</li> </ul>


## ⚠ Warning 警告



Prohibited  
禁止

**Do not put your hand into the basket until it has stopped completely.**  
在脫水槽完全停止轉動前，嚴禁將手伸進槽內拿取衣物。

- Even when the spinning of the basket is slow, there is still a danger of being caught in the motion, resulting injuries. Particular attention should be paid when children are around.  
即使旋轉緩慢，手部仍有被衣物纏繞的危險。兒童尤需注意。

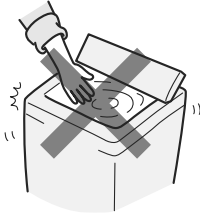

Prohibited  
禁止


**Do not put your hands into the washing • spinning basket during the washing and rinsing process.**  
洗衣和沖洗過程中，嚴禁將手伸入洗衣、脫水槽內。

- Even when the spinning is slow, hands may be trapped by clothes. If necessarily, please press pause button, and put your hands into the basket after it has stopped completely.  
即使旋轉緩慢，手部仍有被衣物纏繞的危險。(若必須將手伸入槽內時，請按下暫停按鈕，待洗衣、脫水槽完全停止旋轉後再伸入槽內)。



Prohibited  
禁止

**Damaged or loosen wire or plug should not be used.**  
嚴禁使用已損壞的電源線、插頭或鬆動的插座。

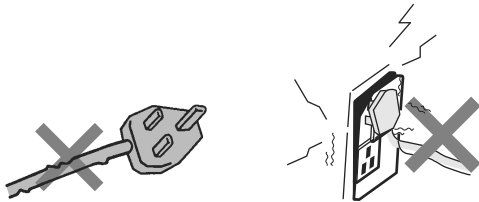

- Otherwise electric shock, short circuit or fire may take place.  
否則可能導致觸電、短路或起火。



Prohibited  
禁止

**Do not damage wire.**  
嚴禁損壞電源線。

**Do not damage or alter the wire forcibly bend, pull, twist or handle the wire. Beside, please do not put weight on or trap the wire.**  
請勿隨意進行改裝、強行彎曲、拉伸、扭曲及捆扎電源線。此外，亦請勿將重物壓在其上或夾於其中。




- Damage of wire may cause electric shock or fire.  
若電源線遭受損傷，可能導致觸電或火災。



Prohibited  
禁止


**Keep child away from the washing • spinning basket and do not place box or shelves next to the washing machine.**  
嚴禁讓兒童探看洗衣、脫水槽。也請勿在洗衣機旁放置台架等物品。

- Children may fall into the basket resulting in injuries.  
兒童可能因掉入洗衣、脫水槽中造成人身傷害。

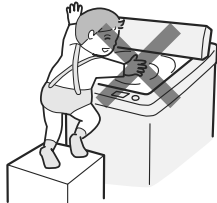

Clear  
清掃

**Thoroughly wipe the power plug when dirt is adhering the prong or around the base of the prong.**  
電源插頭的插片以及插片的夾緊面上，若有塵垢附著時，請擦拭乾淨後再使用。

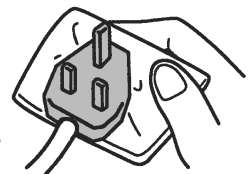


- Failure to do so may cause a fire.  
可能會引起火災。



No smoke or fire  
禁止煙火

**This washing machine is strictly prohibited to get close to the locations with candle, mosquito-repellent incense, dog-end or other kinds of open flame.**

 本洗衣機嚴禁靠近蠟燭、蚊香或煙頭等有明火的場所。




- To avoid injuries caused by the lock damage.  
避免因機構損壞而招致意想不到的傷害。




Prohibited  
禁止

**Do not put gasoline, benzine, alcohol, thinner or fabrics with these stains into or near to the washing machine.**  
請勿將汽油、香蕉水、酒精、燒鹼或沾有上述液體的衣物放入槽內或靠近洗衣機。

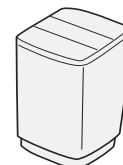

- To prevent fire or explosion which may cause injuries.  
否則可能引發爆炸或火災事故。

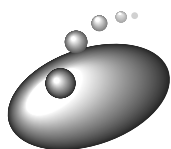

## Safety Precautions (continued)


### 安全方面的注意事項（續）

#### Warning 警告



Prohibited  
禁止

**Do not insert a screwdriver into the Lid Lock hold.**  
嚴禁用螺絲刀插入洗衣機機蓋緊鎖裝置部位的孔內。

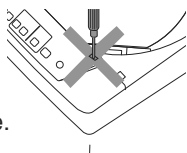

- To avoid injuries caused by the lock damage.  
避免因裝置損壞而招致意想不到的傷害。



Prohibited  
禁止

**Do not open the lid in locked status by force.**  
嚴禁強行打開處於鎖定狀態的機蓋。

- Otherwise, the lid or locking device may be damaged, resulting in unstoppable spinning of washing • spinning basket and thus causing injuries.  
否則將會損壞機蓋或鎖緊裝置，導致洗衣、脫水槽無法停止旋轉，造成人身傷害。



#### Attention 注意



Prohibited  
禁止

**Do not pull the wire from the socket when unplugging the unit.**  
拔掉電源插頭時，切勿拉扯電源線，必須拿住插頭本體向外拉。



- To avoid electric shock or fire cause by short circuit may result.  
避免觸電或因短路導致火災事故。



Prohibited  
禁止

**Do not stand on or put weight on the top of the unit.**  
請勿站立在洗衣機上，或者在其上放置重物。




- Otherwise, deformation and damage may result causing injuries.  
可能因變形或損壞而造成人身傷害。



Prohibited  
禁止

**Do not connect to the hot water supply. And, water of above 50°C should not be used for washing.**  
請勿連接至熱水管，並且用溫水進行洗滌時，水溫嚴禁超過 50 °C。

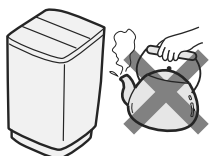


- Electric shock or leakage may occur due to deformation of plastic parts of the unit.  
可能因塑料部件的變形受損而導致觸電或漏電事故。



Prohibited  
禁止

**Keep hands and feet away from the bottom of the washing when it is motion.**  
運轉過程中，請勿將手或腳伸至洗衣機的下部。

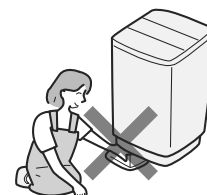

- Ports in motion beneath the unit may cause injuries.  
旋轉部件可能會引起人身傷害。



water  
leakage  
漏水

**Please unplug the unit when not using the unit for a long period of time.**  
不使用洗衣機時，必須將電源插頭拔出。

- Electric shock or leakage due to aging of insulator may cause fire.  
可能因絕緣老化而引發觸電、漏電或火災事故。



water  
leakage  
漏水

**Water supply hose should be tightly screwed to the unit.**  
供水管連接機體的螺母必須擰緊。



- Failure to do so may result in water leakage.  
可能導致漏水。
- Used for a long period of time, the unit may result in water leakage caused by loosen union nut. So please check it in time and screw tightly again.  
長期使用後，可能會因連接螺母鬆動造成漏水而遭受不必要的損失。因而請務必定期檢查並重新擰緊已鬆動的螺母。



water  
leakage  
漏水

**Check water supply hose connection by turning on the water before washing.**  
開始洗衣前，請先打開水龍頭，檢查供水管的連接狀況。

- To prevent damages caused by possible water leakage due to loosen screw.  
如果螺釘鬆脫，會因漏水而招致不必要的損失。



water  
leakage  
漏水


**When installing the washing machine, be sure to hang the water drainage hose.**  
安裝洗衣機時，請務必將排水管挂起。

- If water drainage hose is not hung up, the remained water inside will flow out and result in unnecessary loss.  
如果排水管沒有挂起，殘留在內部的水會流出，從而造成不必要的損失。




water  
leakage  
漏水

**Electricity supply must be unplugged with dry hands during maintenance and repair.**  
維修保養時，請務必將電源插頭從插座拔出。

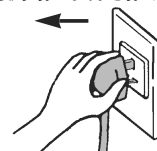

- Otherwise, electric leakage causing injuries may occur.  
避免因漏電而招致傷害。

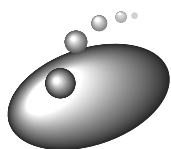

## Safety Precautions (continued) 安全方面的注意事項（續）

### ⚠ Attention 注意




**Please turn off the water tap when not using the unit.**

不使用洗衣機時，必須關閉水龍頭。

water leakage  
漏水

- To prevent damages caused by water leakage.  
以防產生漏水。

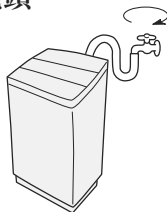

Prohibited  
禁止

**Do not wash, rinse and spin the water proof fabric or cloth.**

請勿洗滌防水性的苫布或衣物。

(sleeping bag, raincoat, cover of skiing, utilities, bicycles, cars and motors  
睡袋、雨衣、滑雪用具以及自行車、轎車、摩托車的車罩等。)

- Otherwise may lead to injury by abnormal vibration during spinning or damage the washing machine, wall, floor and clothes.  
可能在脫水時產生異常振動而引起人身傷害，或者導致洗衣機、牆壁、地板以及衣物的損壞。



Prohibited  
禁止

**Do not incline installing the washing cap. Do not use the washing cap except WOOL process, BLANKET process.**  
嚴禁傾斜安裝洗衣蓋，並絕對禁止在『毛絨』、『被毯』程序以外使用洗衣蓋。

- Splash of water may occur or washing cap may be swung out of the basket.  
可能會因水滴飛濺或洗衣蓋彈飛出造成洗衣機受損或人身傷害事故。



## Installation Guide 安裝指南

### Installation of Washing Machine 洗衣機的安裝

#### Where to install 安裝地方

- Please install on a solid horizontal surface.**

請安放在堅硬、平坦的地面上。

- Installation on a slippy or irregular surface may result in noise and shaking.  
安放在易於滑動、柔軟的地面上，會容易產生振動和噪音。



Solid, horizontal surface  
堅硬、平坦的地面



Weak surface  
柔軟的地面





Irregular surface  
凹凸的地面

- Avoid installing the unit too close to the wall.**

請勿靠近牆壁安放。

- This is to prevent abnormal vibration and noise.  
以防止異常振動和噪音。

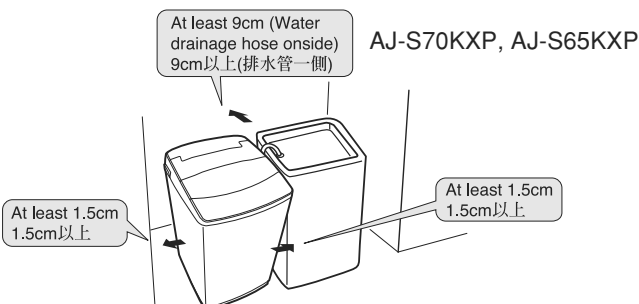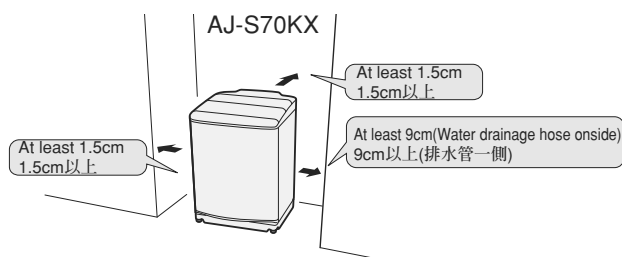


#### How to install 安裝方法

- The unit should be installed on a flat horizontal surface.**

請水平安裝洗衣機。


**Otherwise sudden stop or abnormal sound may result during the spinning cycle.**  
若安裝得不水平，會導致脫水時停機或產生異常聲音。

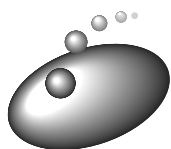

# Installation Guide (continued) 安裝指南（續）

## Installation of Washing Machine 洗衣機的安裝


- 1 Adjust the instability of the washing machine with adjustable leg.**  
用可調機腳來調整洗衣機的不平穩。

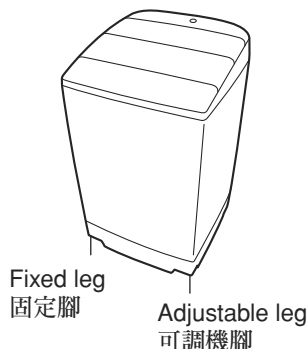

- 2 Please make sure of the horizontality of the washing machine.**  
請確認機體的水平度。

- As shown in the figure, the horizontality can be easily observed by the string used to hang an object. 如圖所示，用懸掛重物的細繩來觀察，即可輕易確認其水平度。

It is level if the clearance between A and machine body is the same with that between a and the machine body.  
A 和 ④ 兩點與機體之間的間隙相同，即表示水平。

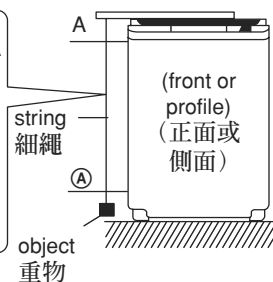


### Inspection of trial run 試運轉的檢查

**Put some water into the washing barrel and reconfirm its horizontality.**


在洗衣槽內放些水，請再一次確認其水平度。

- The ground is level if all front, rear, left and right height difference between the spinning hole and water surface are less than 3mm.  
脫水孔相對於水面的高度差(B與C的差)，如果前後左右均在3mm以內，就表示地面是水平的。
- To install the machine on an inclined floor, leg caps in the attached accessory kit can be used to adjust height by connecting them to the fixed leg.  
安裝在傾斜的地面上時，請將附有的腳套套在固定腳上進行調整。
- Confirming the machine type of AJ-S70KXP/AJ-S65KXP, please install the water drainage hose and hang it on. Otherwise there will be no water in washing basket. 9  
AJ-S70KXP/AJ-S65KXP 機型確認時，請先安裝排水管並將其連起 / 排水管的安裝及固定方法。 9  
否則洗衣槽內無法盛水。

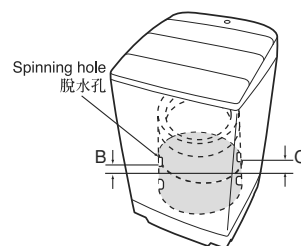


## How to Use the Adjustable Leg 可調機腳的使用

- 1 Loosen the lock nut by unscrewing in arrow direction ① before using the adjustable leg to stabilize unit.**  
將鎖緊螺母沿箭咀方向 ① 旋鬆，再旋轉可調機腳調整機身的平穩。

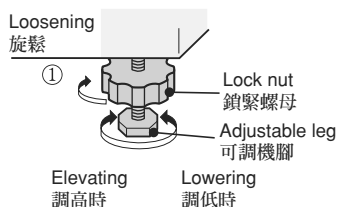

- 2 After adjusting of the unit, tighten the lock nut by screwing it in arrow direction.**  
調整完畢後，將鎖緊螺母沿箭咀方向 ② 旋緊。

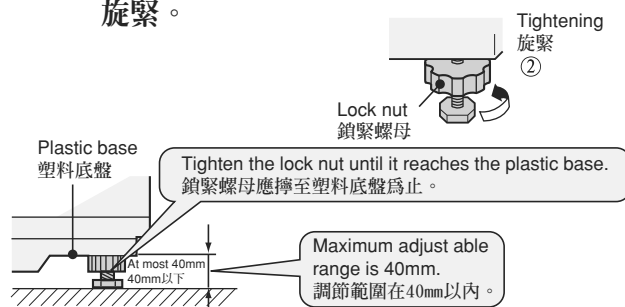




## How to Install the Water Drainage Hose 排水管的安裝(AJ-S70KXP, AJ-S65KXP)

### 1 Connect the water drainage hose with the water drainage joint on the back of the body.


將排水管連接到機體背後的排水接頭上。

- Fully insert it into place to avoid leakage.  
應切實地插入到位，以免漏水。

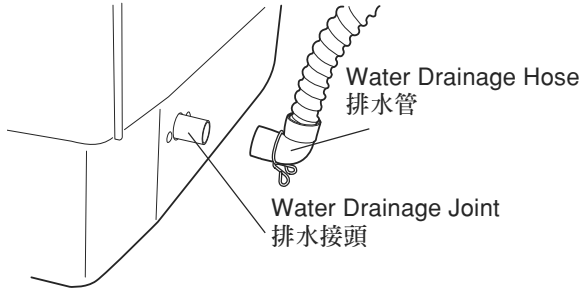


### 2 After the connection is completed, please use hose clipper to clamp the water drainage hose to avoid fall-off.

連接好後，請用軟管夾子將排水管夾緊，以免脫落。


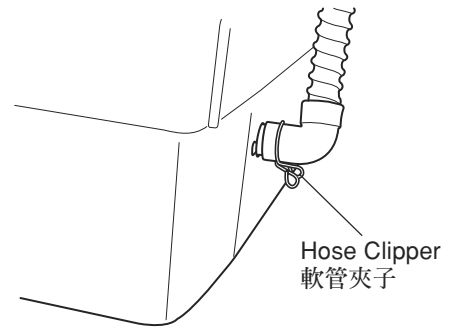


### 3 ① Insert the fixing holder of water drainage hose into mounting hole. 將排水管固定架插入孔中。

- ② As shown in illustration, rotate the fixed leg for 90 degree into hole.  
按圖示方向旋轉 90 度，將固定腳旋入孔中。

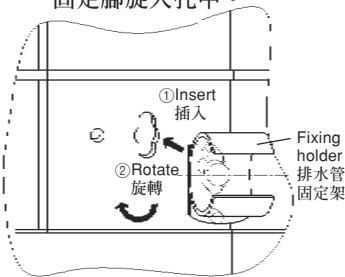


### 4 Pull the water drainage hose straight, concave to fix into the fixing holder of water drainage hose. 將排水管拉直，嵌入固定在排水管固定架上。

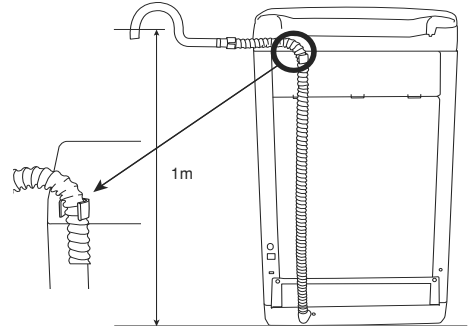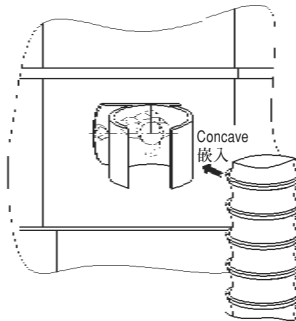


Water drainage hose  
排水管

#### Attention 注意

- To avoid direct draining due to the fallen water drainage hose, the water drainage hose must be used only after installing into fixing holder and its hanging height should not exceed 1m.  
為了避免排水管掉落造成直接排水，請務必將排水管嵌入固定架後再進行使用，且排水管的掛靠高度不應超過 1 米。
- Do not release the water drainage hose lest the water is splashed.  
請勿將排水管放倒，以免水洒落。
- Do not use extended water drainage hose.  
請勿使用延長排水管。
- Do not immerse the U-shaped hose on the tail of the water drainage hose in the water.  
請勿將排水管尾部的 U 形管浸沒在水中。
- When using it in winter, to prevent icing, please release the water drainage hose after using and place its tail in water container such as basin, set the washer to single dehydration mode and drain the remained water. 44  
在冬季使用時，為防止結冰，使用結束後，請將排水管放倒，並將其尾部放入水盆等盛水容器，設定洗衣機為單脫水，將殘留的水排乾。 44
- Be sure not to install the water drainage hose at a position lower than water drainage joint, otherwise, it could lead to difficulties in water drainage.  
排水管安裝時，請勿低於排水接頭，如低於排水接頭可能會導致排水不暢。

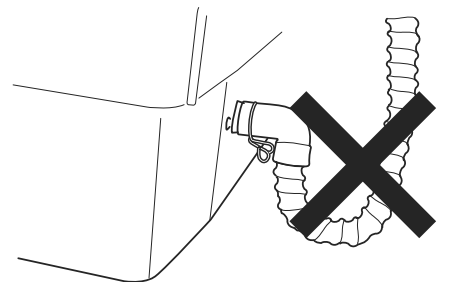

※ This discharge pipe installs the method to be only suitable in AJ-S70KXP, AJ-S65KXP  
此排水管安裝方法只適用於 AJ-S70KXP, AJ-S65KXP。

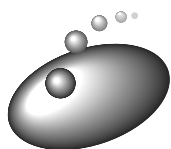

# Installation Guide (continued) 安裝指南 (續)

## How to Install the Water Drainage Hose 排水管的安裝 (AJ-S70KX)


■ The water drainage hose is installed at the factory on the right side. It can be moved to the left side if necessary.

產品出廠時，排水管安裝在機身右側，請視排水位置的具體情況將其換至左側。

### 1 Lay the unit down slowly.


請將機體輕輕地放倒。

- Lay the unit down on some corrugate paper to prevent damage.  
放倒機體時，請在地面上放置一些瓦楞紙類的襯墊，以免損傷機身。

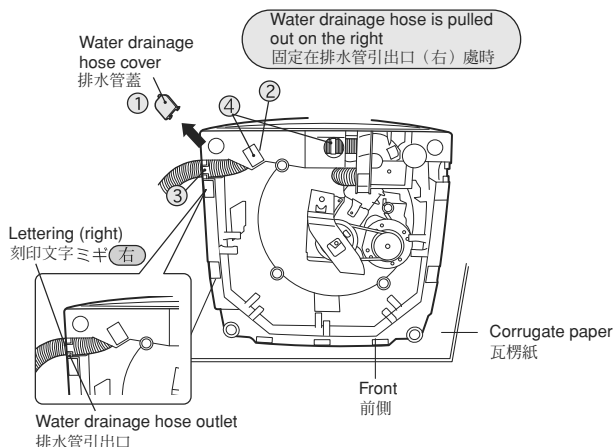

### 2 Pull out the water drainage hose from the left side of the unit. 排水管從左面引出。

- ① Remove the left water drainage hose cover.  
將機體左面的排水管蓋拆下。
- ② Inserts in the scoop channel with screwdriver, loosens the hose clamp.  
用一字螺絲刀插入凹槽內，鬆開軟管固定夾。  
※Advert: the screwdriver please don't bump into the hose.  
※注意：螺絲刀請勿碰到軟管。
- ③ After pulling out the end with marking “ミギ” (right) of the water drainage hose from the right groove of the unit, the end with marking “ヒタリ” (left) of the water drainage hose should be inserted into the corresponding groove of the left unit.  
把排水管刻印文字“ミギ”(右)標記部從機體右側的凹槽內引出，刻印文字“ヒタリ”(左)標記部應嵌入機體左側對應的凹槽內。
- ④ The water drainage hose should be pulled out through the proper hose retainer when the hose is pulled out on the left.  
排水管從左面引出時，排水管應通過相應的軟管固定夾後再引出。

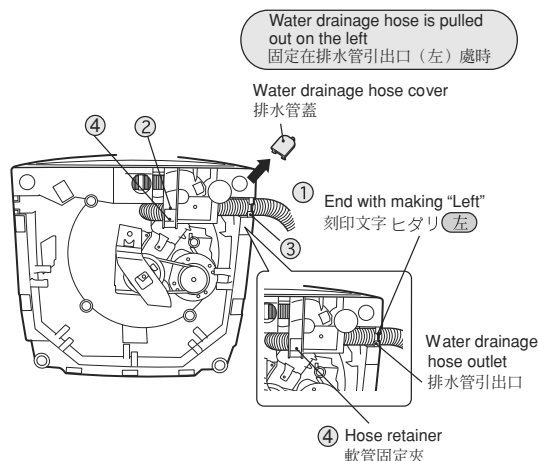

### ⚠ Attention 注意



The “ヒタリ” (left) or “ミギ” (right) mark of the water drainage hose should be inserted into the corresponding groove of the unit.

安裝洗衣機時，請務必將排水管的刻印文字“ヒタリ”(左)或“ミギ”(右)標記部嵌入機體相對應的凹槽內。

- Water drainage hose which inserts into the unit, can't touch other parts, to prevent the damage caused by water leakage.  
排水管在機體內的部分，不應與其他部件碰觸，以免因破損產生漏水而導致不必要的損失。
- Water drainage hose retainer must be tightened.  
排水管固定夾必須夾緊。
- The inner section of the water drainage hose must be secured by the retainer before fetched out.  
排水管機內部分必須經固定夾固定後再引出。

※ This discharge pipe installs the method to be only suitable in AJ-S70KX.  
此排水管安裝方法只適用於 AJ-S70KX。


### ■ When fitting the water drainage hose to the water drainage outlet

排水管插入排水口時

If the water drainage outlet is too shallow or the end of the water drainage hose touches the grounds, cut the end of the water drainage hose in an oblique angle.

排水口較淺或排水管前端與地面碰觸時，可將排水管的前端沿斜向切除一部分。

- Failure to do so may cause insufficient rinsing or unit malfunction due to poor drainage or too much subbles during rinsing and spinning.  
若不切除，在漂洗及脫水時，由於排水狀況的不良，將會引起漂洗不充分或因肥皂沫而影響電機運轉。

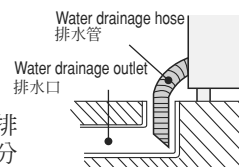

## Installation of the bottom plate 底板的安裝

The bottom plate is placed on the packaging foam on the top of the washer.

出廠時，底板安放在洗衣機頂部的包裝發泡上


### 1 Please place the washer transversely in a slight way.

請將機體輕輕地放倒。

- Before placing the washer transversely, lay some soft paper pad on the ground to avoid damage to the body.  
放倒機體時，請在地面上放置一些瓦楞紙類的襯墊，以免損傷機身。

### 2 Align the hook on the bottom plate with the square hole on the chassis and insert it, then tighten the screw.

將底板上的倒鉤對准底盤上的方孔插入，然後擰緊螺釘。

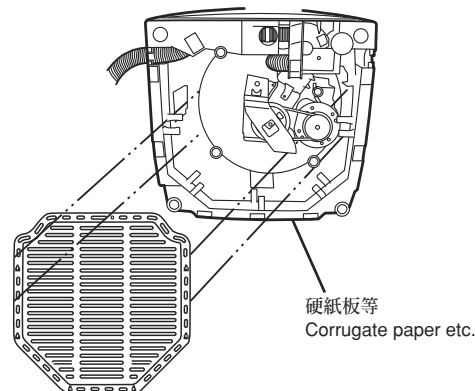

## How to Install the Water Supply Hose 供水管的安裝

### Connecting the water supply hose to the main unit 供水管與機體的連接

Firmly tighten the union nut when connecting the water supply hose to the main unit.

沿箭咀方向旋轉連接螺母，使其與供水口緊緊相連。


- Loosely tightened union nut will cause water leakage.  
請務必擰緊供水管與機體的連接螺母。否則，將會漏水。
- When removing the hose, unscrew the union nut first.  
拆卸供水管時，先鬆開連接螺母，再進行拆卸。



### Extended the water supply hose 供水管的延長

Please use optional extension tube for lengthening the water supply hose.  
請使用另行銷售的延長供水管。

- Three standard of extension hoses (1m,2m,3m) are available. Please inquire distributors for extending the water supply hose.  
備有 1m、2m 和 3m 三種規格供購買。  
如欲延長供水管，請向銷售商查詢。

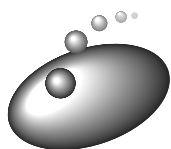


# Installation Guide (continued)

## 安裝指南 (續)


### How to Install the One Touch Joint 便捷連接器的安裝

#### 1 Confirm the diameter of the water tap. 確認水龍頭直徑。

- If the diameter exceeds 2cm, remove the joint ring.  
若水龍頭的外徑超過2cm，可將連接環取出。

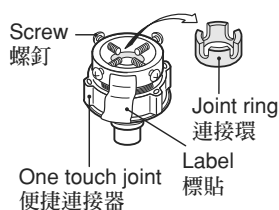


#### 3 Press the sealed pad evenly against the tap and tighten the four screws in a uniform fashion. 將密封墊均勻地壓在水龍頭上，再將4個螺釘均等地擰緊。

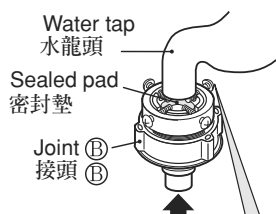


Tighten screw in advance if it is located close to the wall.  
靠近牆壁的螺釘，可預先用手擰進一些。

#### 2 Check the distance between joints A and B. 確認接頭 A、B 之間的間隙。

- Screw joint B in the arrow direction to adjust the gap.  
沿箭咀方向旋轉接頭 B 調整間隙。

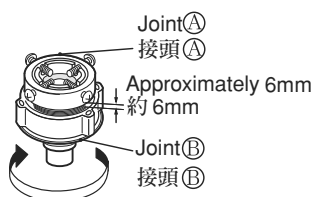

#### 4 Tighten joint B in the arrow direction to reduce the gap between joint A and B to 4mm or less. 沿箭咀方向擰緊接頭 B，使接頭 A、B 之間的間隙在 4mm 以內。

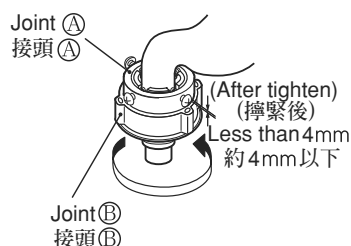

- For water supply hose installation, please refer to "How to install the water supply hose" in the user manual.  
供水管的安裝參閱使用說明書中『供水管的安裝』一章。
- Loosening may occur with extended use. In such case, reinstall the joint following steps 2 to 4.  
長時間使用後，可能會因鬆脫而引起漏水，此時請按 2 ~ 4 的步驟重新安裝。  
(Carry out the same steps when reinstalling the one touch joint at a change of residence, etc.)  
(搬家等需重新安裝便捷連接器時，請按照相同的步驟進行。)

#### Appropriate water tap 適用的水龍頭

#### Horizontal taps A and B as shown below. 橫式 A、B 型水龍頭最為適宜。

Horizontal tap A  
橫式 A 型水龍頭



Horizontal tap B  
橫式 B 型水龍頭

 


Square mouth tap  
方口水龍頭



Distance must be over 1.6cm in order to install correctly.  
若無 1.6cm 以上的距離將無法安裝。

Universal household tap  
萬能水龍頭




May break off after install the one touch joint.  
便捷連接器安裝後，可能會脫落。

Swivel tap  
萬向水龍頭



Water leakage may occur.  
有可能會漏水。

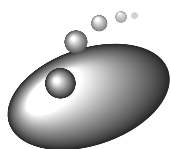

# Installation 安裝

## ⚠ Attention 注意



**Please turn on the water tap to check the connecting condition of the water supply hose before washing.**

開始洗衣前，請先打開水龍頭，檢查供水管的連接狀況。

- To prevent damages caused by water leakage due to loosen screw.  
如果螺釘鬆脫，會因漏水而招致不必要的損失。

## How to install and remove the water supply hose

### 供水管的安裝方法和拆卸方法

#### Water tap 水龍頭

**Do not allow water tap, one touch joint and rubber ring to touch the unit when installing them.**


安裝水龍頭、便捷連接器以及滑環時，注意別讓它們碰到洗衣機機體。

#### ■ Installing 安裝方法

**1 Push down the rubber ring and insert the tap into the one touch joint.**  
將滑環下壓，然後插入便捷連接器內。

**2 Release the rubber ring and push up the water supply hose until it clicks.**  
放開滑環，向上推壓供水管，直至發出“叭”的鎖緊聲為止。

- Pull the water supply hose to check that it does not come off easily.  
拉一拉供水管，確認供水管不會脫落。

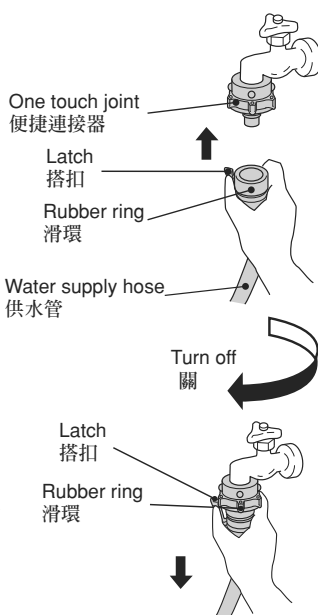

#### ■ Removing 拆卸方法

**1 Turn off the water tap.**  
關閉水龍頭。

**2 Press the start button and let the unit run for about ten seconds.**  
按下啟動按鈕，運轉 10 秒鐘。

- This is to prevent water splash when removing the tap.  
為了防止拆卸時水花四濺。

**3 Remove the latch and the water supply hose while pushing down the rubber ring.**  
鬆開搭扣，拉下滑環，同時將供水管拔下。

#### Main unit 機體

**Turn the union nut in the direction as shown by the arrow and firmly. Connect it to the water supply opening.**

沿箭咀方向旋轉連接螺母，使其與供水口緊緊相連。

## ⚠ Attention 注意




**Firmly tighten the union nut when connecting the water supply hose to the main unit.**

- 請務必旋緊供水管與機體的連接螺母。  
• Failure to do so may result in water leakage.  
螺母鬆脫的話，可能會漏水。



- Loosely tightened union nut will cause water leakage.  
連接螺母如不擰緊，可能產生漏水現象。
- When removing the hose, unscrew the union nut first.  
拆卸時，擰下連接螺母，即可拆除。
- Please note that water supply hose and one touch joint should be used.  
請使用隨機配套的供水管和便捷連接器。
- The appliance is to be connected to the water mains using new hose-sets and that old hose-sets should not be reused.  
應使用附帶的新的連接水管進行連接，舊的連接水管不得再次使用。

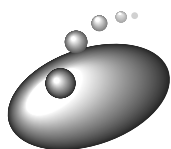


## Safety Check 安全檢查

**If any of the following conditions or other abnormalities occur, immediately pull out the power plug to prevent an accident and request help from an authorized dealer or agent.**

如出現下列情況或其他異常現象，請立即拔下電源插頭，務必向有關的經銷商委托檢查、修理。(可能根据實際情況收取費用)

- Never conduct repairs by yourself as it may be dangerous.  
請勿自行維修，以免發生危險。
- If you have used the washing machine for 4 - 5 years, even if the following conditions and other abnormalities do not occur, request for safety inspection of the machine is still required.  
使用超過 4 ~ 5 年的洗衣機，即使沒有出現下列情況或其他異常現象，亦請進行安全檢查。
- If the power supply cord is damaged, Please repair it in a repair shop appointed by the manufacturer or its service agents in order to avoid a hazard.  
電源線破損時，請到廠商指定的店鋪修理，以免危險。
- The washing machine is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.  
兒童、殘疾人士、智障人士在沒有監管和指導的情況下請勿使用本品。
- The washing machine having ventilation openings in the base.  
The washing machine bottom must not be obstructed by carpeting when the washing machine is installed on a carpet floor.  
洗衣機的底部應保持通風。  
安置洗衣機時，請勿因地毯而妨礙洗衣機的底面安置。


- When you turn on the switch, the machine sometimes does not operate.  
若打開開關，洗衣機或會停止運作。
- The power cord has "cracks" or "flaws".  
電線出現損毀或裂痕。
- There are abnormal sounds and vibrations during operation.  
運行過程中發出異常聲音或震動。
- The agitator does not stop easily. ( It takes over 15 seconds for the agitator to stop )  
洗衣槽不易停止。(停止洗衣槽需要 15 秒鐘以上)
- There is water leakage. (Basket, hose, joint, etc.)  
漏水。(洗衣槽、水管、接頭等)
- There is a smell of burning.  
有燒焦味。
- If you touch the machine, you may get an electric shock.  
用手触摸時，有電擊的感覺。

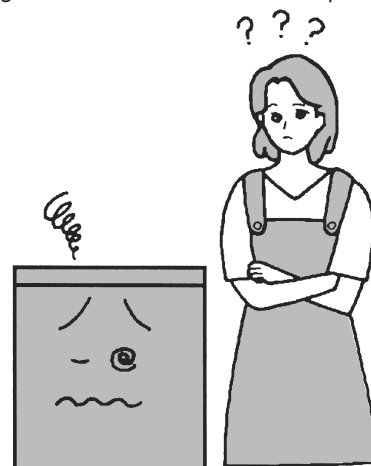

**In case when the washing machine is used in places other than ordinary households.**

在一般家庭以外使用時

- If the washing machine is in use for extremely long periods of time compared to ordinary household usage, such as in dormitories and hospitals, it may be necessary to change parts (such as the clutch, belt or sealed pad) more frequently. In this case, consult with the dealer from whom you purchased the washing machine and have the machine inspected periodically.  
如在宿舍或醫院等地方使用，而每天的使用時間比一般家庭較長時，或需在短期內更換零件(如离合器、皮帶、密封墊等)。請與購買洗衣機的商店聯絡，接受定期檢查後再使用。

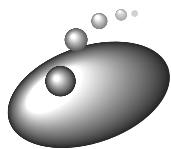


## Washing Machine Repair 洗衣機修理事宜

In case of malfunction of the washing machine, read the manual in detail before requesting repair services. If the the problem still cannot be solved, contact an authorized service dealer or a service agent and provide the following information.

- ① Model name: AJ-S70KXP, AJ-S65KXP, AJ-S70KX.
- ② Describe abnormal situations and damages in detail.
- ③ Your address and telephone number.

若洗衣機在使用期間發生故障，在請求維修前，請務必詳閱本說明書。若發生的故障或異常情況未能用本說明書的指示解決，請與認可的維修服務店聯絡。請向維修服務店提供下列資料：


- ① 產品型號：AJ-S70KXP, AJ-S65KXP, AJ-S70KX。
- ② 盡可能詳細的說明故障狀況或異常情況的內容。
- ③ 您的聯絡地址和電話號碼。

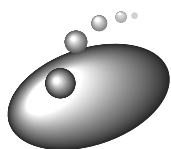


 

 


# Technical Description


## 各部件名稱

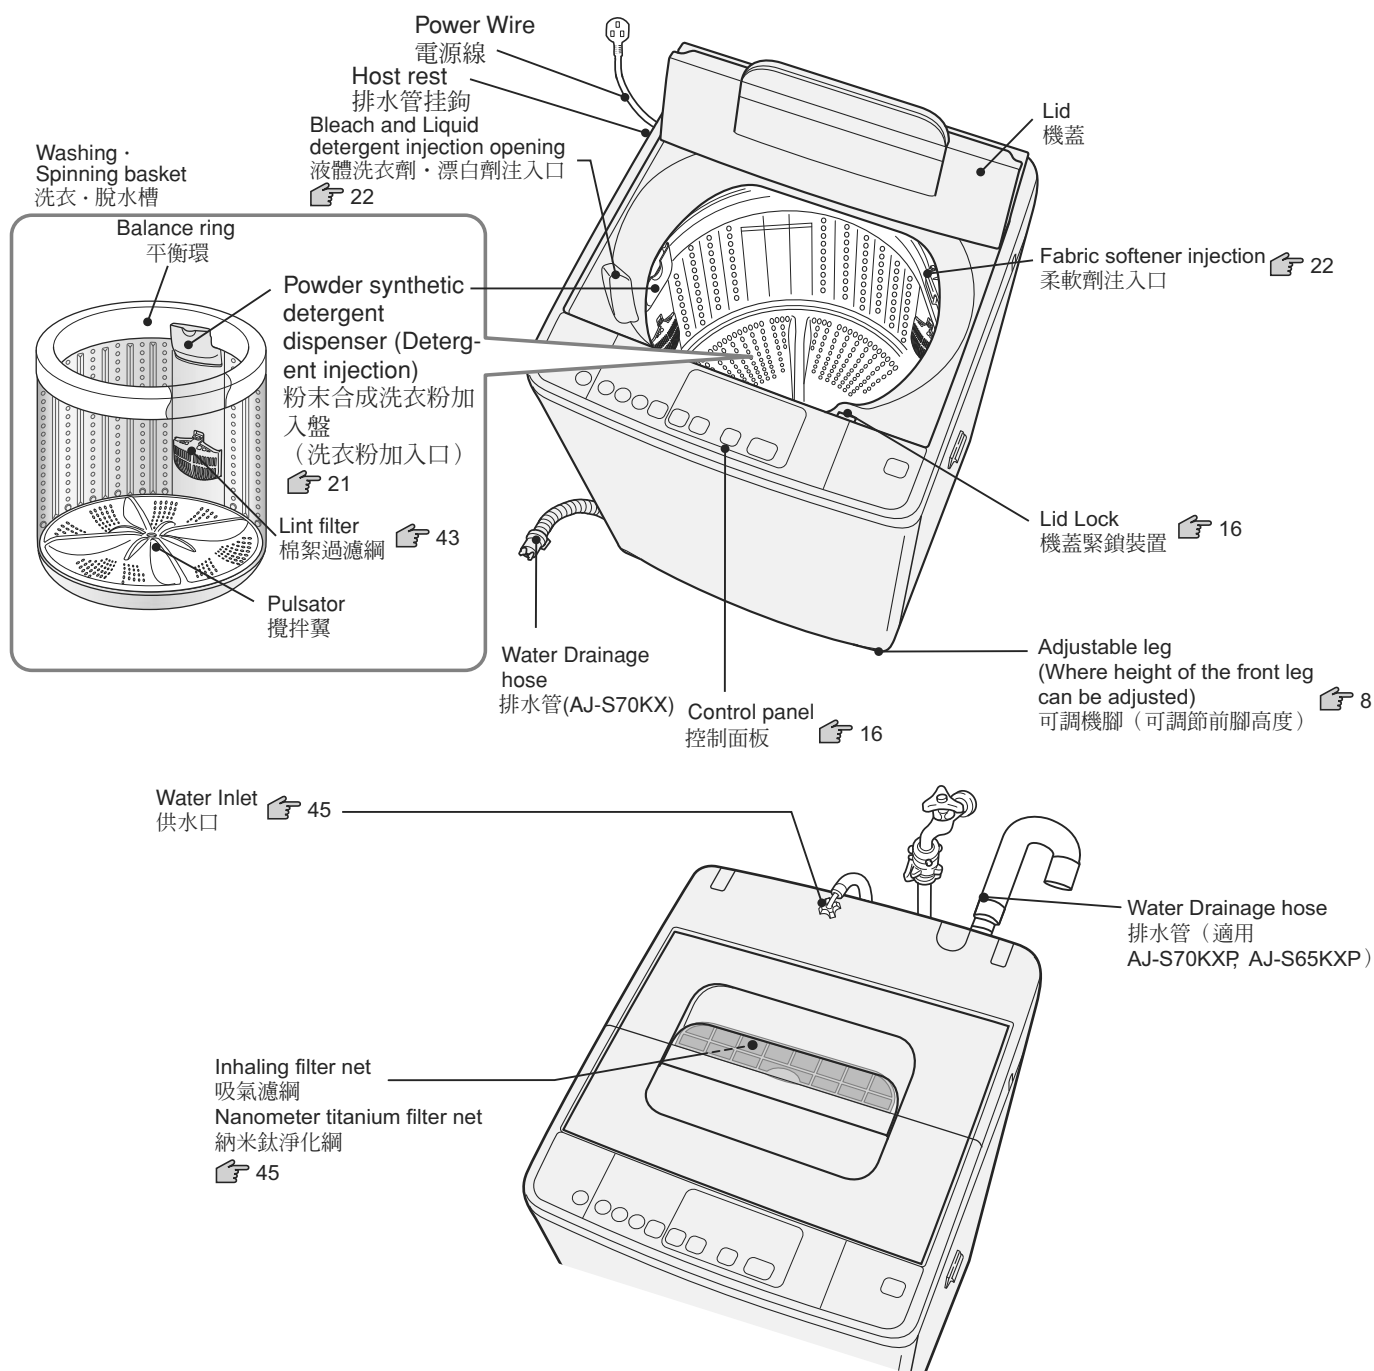☞ The number next to the sign is the page number for detailed description.  
後面的數字表示詳細說明的頁數。



### Accessories (Refer to "Installation Guide") 附件 (請參照『安裝指南』)

<p>Water supply hose 供水軟管</p>  <p>(One) (1根)</p>	<p>One touch joint 便捷連接器</p>  <p>(One) (1個)</p>	<p>Leg cap 腳套</p>  <p>(TWO) (2個)</p>	<p>Base plate (Screws include) 底板 (帶螺釘)</p>  <p>(One) (1塊)</p>	<p>Water Drainage Hose 排水管</p>  <p>(One) (1根) (Suitable in AJ-S70KXP, AJ-S65KXP) (適用AJ-S70KXP, AJ-S65KXP)</p>	<p>Fixing holder of water drainage hose 排水管固定架</p>  <p>(One) (1個) (Suitable in AJ-S70KXP, AJ-S65KXP) (適用AJ-S70KXP, AJ-S65KXP)</p>
---	--	---	---	--	--

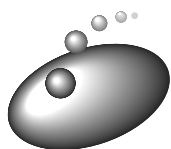

# Control Panel 控制面板

## Washing indicator 洗滌內容表示

The indicators of washing, rinsing and spinning display the ongoing process and its duration.  
洗滌、漂洗、脫水各相應指示燈的顯示，告知您正在進行的洗滌內容和洗滌時間。

- During the washing machine operation, the display (lighting, flashing, darkening) of indicator of each process describes the operation status and the working process to the user.  
洗衣機在運行過程中，通過各進程指示燈的顯示（點亮、閃爍、熄滅）告知用戶程序的運行狀況及其進程。




AJ-S70KX

## Detergent indicator 洗滌劑量表示

The detergent amount and the water level are described by the lighting or flashing of indicator. The amount of detergent refers to the (concentrated) powder detergent. 21

通過指示燈的點亮或閃爍來顯示洗滌劑量和水位。洗滌劑量表示的是（濃縮）粉末洗滌劑。21

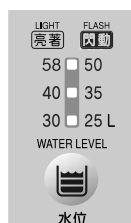

AJ-S65KXP


## LID Lock indicator 機蓋緊鎖

Lid Lock indicator will light when the lid is in locked status.  
機蓋鎖緊時，指示燈亮起。

- Before the water supply, the lid is in the status of locking.  
開始供水前，機蓋處於鎖緊狀態。

## Air Jet indicator 風乾內容表示

Please select the proper air-jet duration in compliance with the air-jet level required to the laundry. The indicator lights to describe the air-jet duration.  
根據對衣物的風乾程度，請選擇相應的風乾時間。通過各指示燈閃爍，顯示出風乾時間。

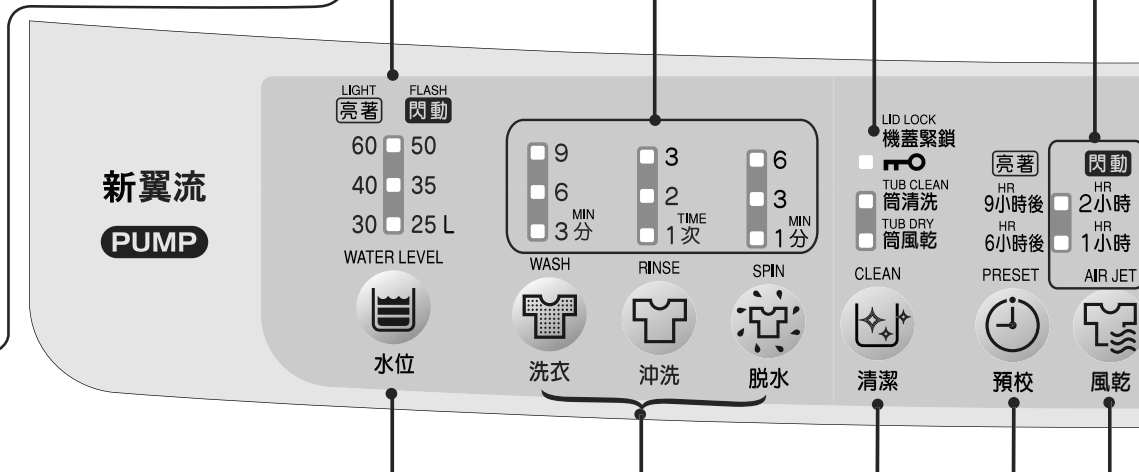

## WATER LEVEL button 水位按鈕

Set the water level manually or replenish water during the agitating.  
在按照自己需要設置水位或在攪拌過程中想再注水時使用。

- After the washing machine starts, any change of setup shall be made before the end of washing and rinsing. Before making the change, please press the "PAUSE" button. (When water is supplied before it reaches the required level, the setup can't be changed)  
洗衣機啟動後，若需更改設置，請在洗滌、漂洗結束前進行。在進行變更操作前，請先按下『暫停』按鈕。（從開始進水到到達規定水位的過程中不能更改設置）
- Press and hold the "WATER LEVEL" button to replenish water during the course of washing or rinsing. (No water will be replenished after reaching the top water level of each process)  
洗滌或漂洗過程中若要再注水，請持續按住水位按鈕，即進行加水。（達到各程序的最高水位後便不再進水）

## WASH·RINSE·SPIN button 洗滌·漂洗·脫水按鈕

Set the processes of washing, rinsing or spinning manually or change the setup.  
在按照自己需要設置洗滌、漂洗、脫水方式或更改設置內容時使用。

- After the washing machine starts, any change of setup shall be made after the operation comes to a pause. During the course from starting the water supply to reaching the required level, or after the end of washing, the setup can't be changed. (There're also processes allowing no change 38)  
洗衣機啟動後若需要更改設置，必須在暫停運行後更改。從開始進水到到達規定水位的過程中，或洗滌結束後，不能更改設置。（也有不能進行更改的程序 38）

Setting injection rinse in AJ-S70KX (AJ-S70KX可設定注水沖洗)

## CLEAN button 清潔按鈕

Set the TUB CLEAN and TUB DRY.  
在設置筒清洗及筒風乾時使用。

## PRESET button 預校按鈕

The button is used to preset the operation time. 31  
預校運轉時使用。31

- The washing process can be set to finish in three, six or nine hours. 洗衣可預校在9小時後或6小時後完成。 [NORMAL], [SOAK], [SPEEDY], can be used with time. 『標準』、『浸洗』、『快速』可設定預校。


## AIR JET button 風乾按鈕

Set the air-jet duration.  
在設定風乾時間時使用。



## Programme indicator 程序顯示

The indicator of selected process will light.  
With each pressing on the "PROGRAM" button, the indicator will light in the following sequence.  
被選程序的指示燈會點亮。  
每按一下『程序』按鈕，指示燈會按以下的順序亮起。

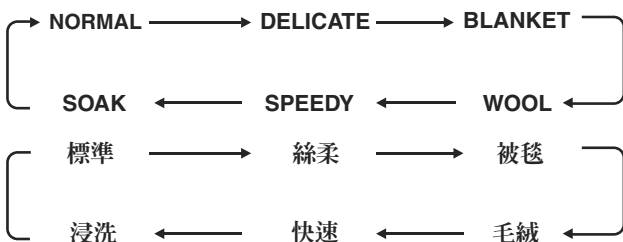

## Sailing indicator 慳水表示

The lamp will light when setting the program of "NORMAL", "DELICATE", "WOOL", "SPEEDY" and "MINI" auto running.

設定『標準』，『絲柔』，『毛絨』，『快速』，『輕量』程序自動運行時，慳水指示燈亮。

※ If setting "water level" or "washing indicator" in above program manually, the lamp will put off.

如果手動設定上述程序中的『水位』或『洗衣內容』時，慳水指示燈熄滅。



## PROGRAM button 程序按鈕

There are six options available, you can choose the right one based on the types and dirty levels of the washings. 24

備有6種程序，可根據衣物的種類和髒污程度來選擇適合的程序。24

- By pressing the "PROGRAM" button, the indicator of the selected program will light. 按動『程序』按鈕，所選擇的程序指示燈會點亮。

## START/PAUSE button (One touch button) 啟動/暫停按鈕『一按通按鈕』

The button is used to start the operation or temporarily pause the operation.

控制洗衣機啟動或暫停時使用。

- After selecting the required process, press this button to start or pause the process operation. 選擇好需要的程序後，按此按鈕可啟動或暫停執行程序。
- If press the "Pause" button during the course of spinning, no signal can be received until power is switched off, and the lid can't be opened. 如脫水過程中按下暫停按鈕後，到開關斷開為止都不再接收任何按鈕信號，機蓋亦不能打開。

## POWER switch 電源開關按鈕


This button is used to "switch on" and "switch off" the power.

用於電源的『開』和『關』。

- When the washing cycle finishes, the buzzer beeps and the power of the unit will be switched off automatically. The washing machine will be automatically switched off after 5 minutes of no start with power on.

49

電源自動關閉功能運行結束後，洗衣機發出蜂鳴聲並自動切斷電源。接通電源後，不啟動洗衣機，將其放置5分鐘後也會自動關閉電源。49

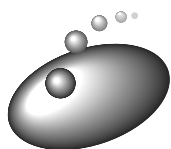

## Control Panel(continued) 控制面板(續)

### Lid Lock function 機蓋緊鎖功能

The lid will be locked automatically when washing for children's safe.

為防止意外傷害及保護兒童的安全，洗衣過程中供水開始後，洗衣機會自動將機蓋鎖緊。

#### Attention 注意

- With the set of Lid Lock function, the washing machine can't operate if the lid is opened. (The control panel will release the alarm if the lid is opened)  
設定機蓋緊鎖功能後，洗衣機不能在機蓋處於開啓狀態時運轉。(機蓋處於開啓狀態時，控制面板將發出警報)

※ Factory initial state for "safe mode".

出廠初始狀態為“安全保護模式”。



### Remove safe mode 解除安全保護模式

**1** Press "POWER ON/OFF" button .

按下『電源開/關』按鈕 .



**2** Press and hold down the "WASH" button  for at least three seconds, then the safe mode can be removed.

持續按住『洗衣』按鈕  3 秒鐘以上，可解除安全保護模式。

- Press and hold down the "WASH" button  for at least three seconds again to set the safe mode.  
再持續按住『洗衣』按鈕  3 秒鐘以上，可設定安全保護模式。

**3** Cut off the power supply.  
切斷電源。

### When you want to open the lid 想打開機蓋時

Press "START/PAUSE" button   Lock will be removed automatically after washing. Lid can be opened.

按下『啟動/暫停』按鈕   旋轉結束，鎖緊解除，可打開機蓋。

### When beginning again 再啟動時

With the set of safe mode, the lid will be locked as the washing machine restarts.

Without the set of safe mode, the lid will be locked automatically during the course spinning.

在設定為安全保護模式時，洗衣機再啟動時機蓋會立即被鎖緊。

若沒有設定安全保護模式，在脫水時機蓋會自動鎖緊。

### Hope to switch off the buzzer beep after the completion of the washing process 希望消除洗衣結束的蜂鳴聲時


Follow the below steps to switch off the buzzer beep after the completion of washing process.

按以下順序進行操作，可消除洗衣結束的蜂鳴聲。

**1** Press the power button.  
接通電源開關。

**2** Press and hold down the START/PAUSE button for at least three seconds, the buzzer beep can be switched off.  
持續按住啟動按鈕 3 秒鐘以上，蜂鳴聲消除。

- You can press and hold down the START/PAUSE button for at least three seconds to recover the beeping.  
接通電源開關後，持續按住啟動按鈕 3 秒鐘以上，可將蜂鳴聲恢復。

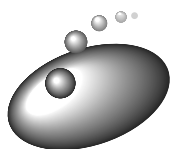

# Before Using Your Machine

## 開始洗衣前

### Preparation for washing machine

#### 洗衣機的準備

##### When the first using 第一次使用時

The washing machine can be used only after the proper installation in compliance with the "Installation Guide".




按照『安裝指南』，確定將洗衣機安裝好後才可使用。

##### Daily using 日常的使用

- 1 The U-shaped hose on the tail shall be tightly secured.**  
(Suitable in AJ-S70KXP, AJ-S65KXP)  
排水管尾端的U型管應牢靠地掛靠。(適用 AJ-S70KXP, AJ-S65KXP)  
**The front of the water drainage hose must insert in the water drainage outlet.**  
(Suitable in AJ-S70KX)  
排水管的前端應牢固地插入排水口內。(適用 AJ-S70KX)
- 2 Connect the water supply hose and turn on the water tap.**  
接好供水管並緩慢打開水龍頭。
- 3 Insert the power plug into the socket.**  
將電源插頭插入插座。

##### How to open the lid 機蓋的開啟方法

- When opening the lid, be careful to prevent it from bending and pull it up. It's maybe hard to open the lid.  
打開機蓋時，應避免機蓋彎折並將其拉起。機蓋有可能較難打開。

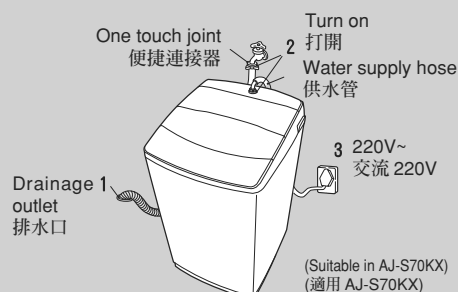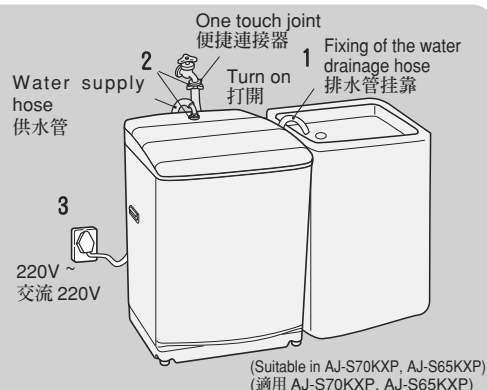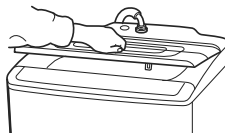

### Preparation for laundry

#### 洗衣前的衣物準備

**Secure strings and pull zips up before putting laundry into the washing machine. (beneficial suggestion)**  
洗滌帶有帶子或拉鏈的衣物時，請先繫好帶子或將拉鏈完全拉上。(有益的提示)



- This is to prevent damage to clothes and zips.  
防止損傷衣物和拉鏈。

**The laundry from which the hair or silk is inclined to run shall have its inner side turn to external before washing.**  
易起球或脫絲的衣物，請先翻至內面再進行洗滌。



**Please remove soil or dirt from laundry before washing.**  
洗滌前，請先將衣物上的泥沙除去。




**Remove anything from the laundry before washing. (Do not forget anything in pocket)**  
洗滌前，請先取出衣服中的異物。(不要忘記口袋中的東西)



- To avoid damaging the clothes and unit malfunction.  
以免損傷衣物或導致洗衣機出現故障。

**Clothes of easily-fadeaway colors must be separated.**  
易褪色的衣物應分開洗滌。

The jeans and alike  
如牛仔褲等衣物

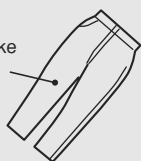

- The bluejeans that are inclined to fade may decolor during washing.  
洗滌易褪色的藍色牛仔褲可能會引起褪色現象。

**The vulnerable laundry shall be put into the wash string bag before washing.**  
洗滌容易損傷的衣物時，請放入洗衣袋中進行洗滌。

To be cautious, please put the laundry with lace or the woman underwear with steel wire into the optional wash string bag before washing.  
慎重起見，請將帶蕾絲的衣物或帶鋼絲的女性內衣放入市面出售的洗衣袋中清洗。


- Prevent the laundry from damaging by accident.  
防止衣物意外受損。

**The laundry from which the silk is inclined to run shall be put into the string bag before washing.**  
易抽絲的衣物請放入洗衣袋中清洗。

The laundry made of corduroy or other particular cloth, and the black hose or other clothing sensitive to silk-running shall be put into the optional anti-silk-running string bag before washing.  
像燈芯絨等特殊布料或黑色長統襪等容易脫絲的衣物，請放入市面出售的防脫絲洗衣袋中清洗。

**Please handle the dirt as early as possible.**  
請盡早處理污垢。


As it's hard to remove the dirt after adhering to laundry for long, the dirt shall be under cleanout and handling with detergent before washing, which brings better washing effect.  
污垢長時間附在衣物上會很難脫落，在洗衣前先清洗污垢並用洗衣劑處理，洗衣時效果會更加明顯。

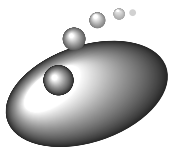

## Before Using your Machine (continued) 開始洗衣前（續）

### How to put laundry in 衣物的放入方法

Put in the laundry as evenly distributed as possible.  
盡可能均勻地放入待洗衣物。

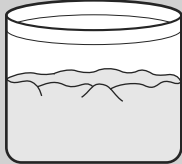


Put bulky or floating laundry in basket first.  
大件衣物或易浮起的衣物應先放入洗衣槽。



- It smoothes rotation of the laundry.  
有利於衣物的良好旋轉。
- Splash of water must be prevented.  
防止水滴飛濺。

The bluejeans and other thick cloth shall be evenly distributed in the washing basket before washing.  
(Prevent the laundry from overflowing during washing)  
將牛仔褲等厚布料衣物均勻地放入洗衣槽內再進行清洗。  
(防止脫水時衣物溢出)

- Press the laundry with hand during water supply, and make the water infiltrate the cloth sufficiently.  
供水時用手壓住衣物，讓水充分滲入布料。
- Splash of water must be prevented.  
防止水滴飛濺。

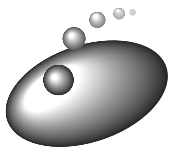

## Checking Amount of Laundry and Detergent (Approximately Amount) 檢測洗衣量和洗衣粉量（大致用量）

### Checking amount of laundry 洗衣量的檢測

Select the process required for washing after put in the laundry, and press the "START" button. The sensors begin to detect the weight of laundry, and the necessary detergent amount (approximate amount) and water level are displayed correspondently.  
(The detection is not included in the processes of "SPEEDY", "WOOL", "BLANKET", "DELICATE", "CLEAN" and "AIR-JET".)

放入衣物後選擇洗衣所需程序，按下『啟動』按鈕，傳感器開始檢測衣物重量，並相應顯示所需的洗衣粉量（大致用量）和水位。  
(『快速』、『毛絨』、『被毯』、『絲柔』、『清潔』、『風乾』程序不進行檢測。)

**1 Put the laundry in, turn the power ON, choice the appropriate process, and press the "START" button.**


放入衣物，按下電源開關按鈕。  
選擇洗衣所需程序，按下『啟動』按鈕。



- The pulsator rotates with absence of water to check the washing load (cause no damage to clothes)  
攪拌翼在無水狀態下旋轉，檢測洗衣量。  
(不會損傷衣物)

**2 Display the necessary detergent amount and water level.**  
顯示所需的洗衣粉量和水位。

The indicator lights to show that the water levels on the left column are selected.  
指示燈點亮時表示左列水位被選。

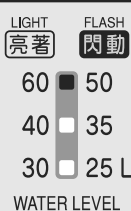

The indicator flashes to show that the water levels on the right column are selected.  
指示燈閃動時表示右列水位被選。

※ AJ-S70KXP/AJ-S70KX


**3 Put the detergent in. ( 20~22)**  
放入洗衣粉。( 20~22)

- Put detergent, fabric softener, bleach, and close the lid.  
放入洗衣粉、柔軟劑、漂白劑後，請關閉洗衣機機蓋。
- After the display of the detergent amount and water level, please add in detergent in one minute, and close the lid, otherwise it will sound alarm. (at that time, if the "WATER LEVEL" button is pressed, the washing machine will not wait any more and start rotating)  
顯示洗衣粉量和水位後，請在 1 分鐘內放入洗衣粉，並關閉機蓋，否則將響起警報。(此時若按下“水位”按鈕，則洗衣機不再等待而立即開始旋轉)
- After the washing basket is filled with water or begins operating, the replenishing detergent shall be thrown into the basket directly.  
洗衣槽中有水或運轉開始後，如要增加洗衣粉，請將洗衣粉直接倒入洗衣槽中。


### Amount of detergent (Approximately amount) 洗衣粉量（大致用量）

 The display of detergent amount (approximate amount) refers to the amount added with the measuring spoon in the package of concentrated power detergent.  
洗衣粉量（大致用量）的顯示是指濃縮粉末洗衣粉包裝盒中計量匙的加入量。


- The usage benchmark of detergent amount (approximate amount) is the capacity of one measuring spoon (about 37g). (Other detergent 23)  
洗衣粉量（大致用量）的使用量是以計量匙一匙（約 37 克）為基準。(其他洗衣粉 23)
- The capacity of measuring spoon depends on the brand of detergent, so please refer to the description on the detergent package.  
計量匙的大小按洗衣粉品牌不同而不同，詳情請參照洗衣粉包裝上的說明。
- The diagram example of detergent measuring spoon only stands for the approximate amount.  
洗衣粉計量匙的圖示只表示大致用量。



※ AJ-S70KXP/  
AJ-S70KX

 

Please put in the detergent as much as 80% of the capacity of measuring spoon (about 30g).  
請放入計量匙 80% 左右（約 30 克）的洗衣粉。

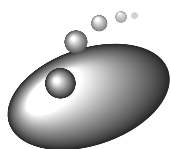

# How to Use Liquid Detergent, Bleach, Fabric Softener

## 洗衣粉、漂白劑、柔軟劑的使用方法



Start the washing machine with water in the washing basket, and the infiltration washing can't perform then. Please put the detergent in the washing • spinning basket.

在洗衣槽有水時啟動洗衣機，不能進行滲透清洗。請將洗衣粉放入洗衣・脫水槽內。

### Powder synthetic detergent 粉末合成洗衣粉

#### Put the detergent in the detergent dispenser

將洗衣粉放入洗衣粉加入盤內

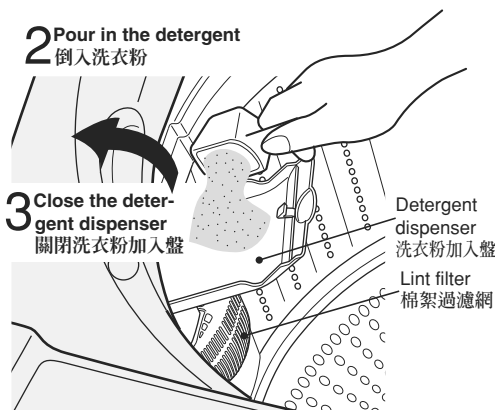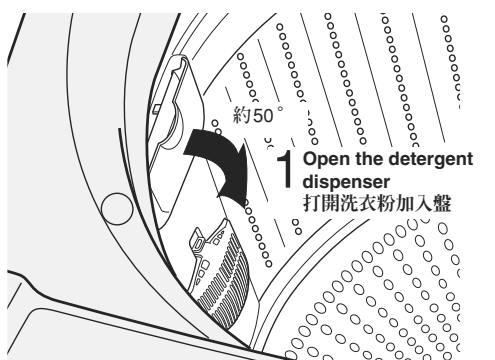


#### Notes 備注

- When water is adhering to the detergent dispenser, please wipe it first. 洗衣粉加入盤有水滴時，請擦乾水滴後注入洗衣粉。
- When the detergent adheres to the dispenser, it remains even the dispenser is closed. If the detergent still adheres to the dispenser after 2 or 3 times of repetitive open and close, please remove the dispenser for cleaning up. (P. 43) 洗衣粉黏附在盤上時，即使關閉，洗衣粉也會殘留在加入盤內。反復開關2、3次後仍然附在加入盤上時，請拆下加入盤進行清洗。(P. 43)
- Please pay attention to keep the detergent away from the injection opening of fabric softener, so as to avoid malfunction. 請注意避免將洗衣粉注入柔軟劑注入口內，以免引致故障。
- Some types of detergent may be hard to dissolve. In this case, please inject the detergent into the washing basket directly after it sufficiently dissolves. 有些種類的洗衣粉可能較難溶解。此時，待洗衣粉充分溶解後請直接將其注入洗衣槽內。
- In the case of bulky laundry, sometimes it may be hard to open the detergent dispenser. In this case, please move the laundry to the opposite side of injection opening, then open the dispenser. 洗衣量太多時，有可能難以打開洗衣粉加入盤。此時，請將衣物撥向注入口的對面一側，再打開加入盤。
- Only after closing the detergent dispenser can the operation begin. The laundry may be damaged under the operation with the dispenser open. 請務必關閉洗衣粉加入盤後才可進行運轉。在加入盤開啟狀態下運轉，很可能會損傷衣物。
- The detergent dispenser can be opened as much as about 50 degrees. Any action to open it by force may cause damage. 洗衣粉加入盤只能打開約50°的角度。強行打開可能會造成損壞。

#### How to install the detergent dispenser

洗衣粉加入盤的安裝方法


Insert the pin into the pin hole at the injection opening. 將洗衣粉加入盤的銷釘分別插入注入口兩端的銷釘孔內。

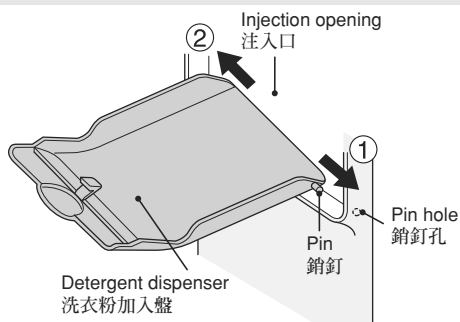


#### How to uninstall the detergent dispenser

洗衣粉加入盤的拆卸方法

- Bend the detergent dispenser. 彎折洗衣粉加入盤。
- Disassemble the pin off the pin hole. 將銷釘從銷釘孔中卸下來。

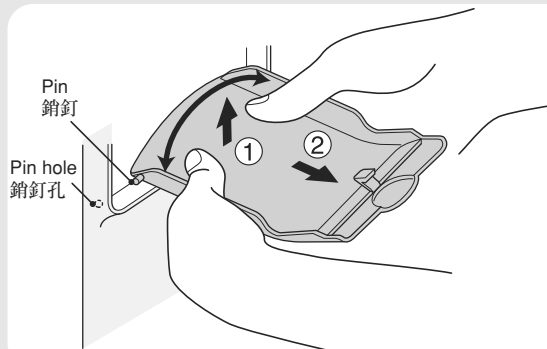

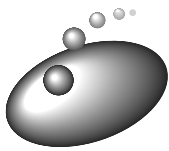

# How to Use Liquid Detergent, Bleach, Fabric Softener (continued)

## 洗衣粉、漂白劑、柔軟劑的使用方法（續）

### Liquid detergent/Bleach 液體洗衣劑 / 漂白劑

#### Liquid detergent 液體洗衣劑

Dilute the liquid detergent with water and gently pour it into the injection opening.

將液體洗衣劑用水均勻稀釋，由注入入口慢慢倒入。


- When using preset operation, dilute the detergent with twice the amount of water.  
預校運轉的時候請稀釋成二倍後再使用。

#### Bleach 漂白劑

Dilute the bleach with water before the washing and gently pour it into the injection opening.


開始洗衣時，先用水稀釋，然後由注入入口慢慢倒入。

Liquid detergent and bleach  
injection opening  
液體洗衣劑、漂白劑注入入口

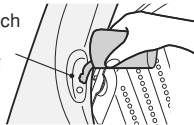

#### Attention 注意

- Follow the instructions for the liquid detergent and bleach on the labels for the usage amount and method to use.  
關於液體洗衣劑和漂白劑的使用量和使用方法，請參照其相關說明。
- Please do not pour bleach directly onto the items being washed. Otherwise, it may cause discoloring and damage the clothes.  
請避免將漂白劑直接用於衣物上，以免引起變色或布料損壞。

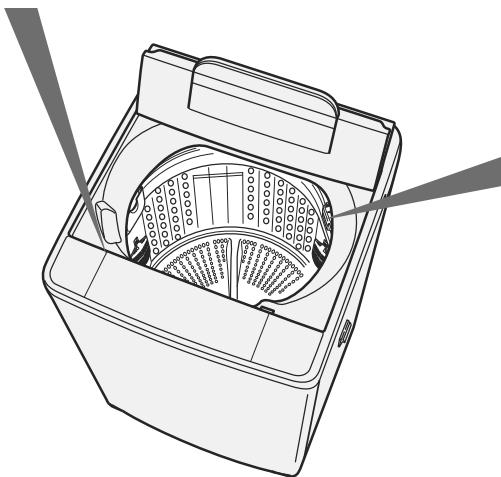


#### Notes 備注

- The concentrated type easily solidifies. Please use twice the amount of water to dilute such fabric softener.  
濃縮型柔軟劑易於固化，因此請用 2 倍清水將其稀釋後再使用。
- Once consumption of the softener shall be less than 45ml. Excessive consumption of the softener instead prevents it from being effective.  
柔軟劑的“一次使用量”應低於 45mL，使用過多的柔軟劑反而不能有效發揮作用。
- Please do not leave the fabric softener in the basket for an extended period (12 hours) as the fabric softener may solidify and cause malfunction.  
請勿讓柔軟劑長時間(超過 12 小時)停留在洗衣槽內，以免柔軟劑在注入入口中固化，導致洗衣機運轉不良。
- When the washing machine or the basket is tilted, water may flow into fabric softener injection opening. (Thus fabric softener performance will be reduced)  
若洗衣機傾斜或供水時洗衣槽傾斜時，水可能會流進柔軟劑注入入口。(導致柔軟劑失去其應有的作用)
- Please use an appropriate amount of detergent. Too much fabric softener may result in poor rinsing and fabric softener performance.  
請使用適量的洗衣劑，使用量過多會降低漂洗效果和柔軟劑的效果。

### Fabric softener 柔軟劑


- 1 Open the cap of the fabric softener injection opening.  
打開柔軟劑注入入口的蓋子。

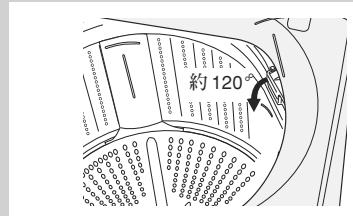

- Softener filling opening can only be opened by an angle of up to 120°. Forced operation may damage the filling opening.  
柔軟劑注入入口只能打開約 120° 的角度。強行打開可能會損壞注入入口。

- 2 Pour the fabric softener into the injection opening in accordance with the indication of water level before the washing starts.

洗衣開始前，按照水位表示，將柔軟劑倒入柔軟劑注入入口內。

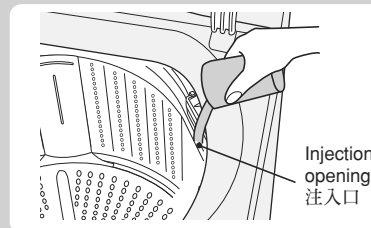

- When you find it difficult to pour the fabric softener into the injection opening, push the basket to one side to pour the fabric softener in.  
當柔軟劑不易倒入注入入口時，請將洗衣槽偏向一側後再倒入柔軟劑。

- 3 Close the cap of the fabric softener injection opening.  
關閉柔軟劑注入入口的蓋子。

- Please note that the cap of fabric softener injection opening should be closed. Please close the cap of fabric softener injection opening before operation.

- 4 Fabric softener will be dispensed into the basket during the final rinse.

柔軟劑會在最後一次漂洗前自動投入槽內。

- Dispensation of the fabric softener is performed automatically by the rotation of the spinning basket. The fabric softener moves in gradually during the spinning and reaches the basket before the final spinning.  
柔軟劑是利用脫水槽旋轉而自動投入槽內的，在中間脫水過程中，柔軟劑從注入入口移向內部，直至最後脫水結束前投入槽內。


#### <Approximate amount of fabric softener>

##### <柔軟劑的大致用量>





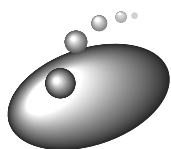


Water level 水位		25L	30L	35L	40L	50L	58L	60L
Fabric softener 柔軟劑	Concentrated type 濃縮型	6 mL	7 mL	8 mL	9 mL	11 mL	13 mL	14 mL
	Regular type 普通型	17 mL	20 mL	23 mL	27 mL	33 mL	39 mL	40 mL

- Concentrated detergent: 6.6mL for 30L of water  
濃縮型柔軟劑：水位 30L 使用量 6.6mL

- Normal detergent: 20mL for 30L of water  
普通型柔軟劑：水位 30L 使用量 20mL



## Amount of Laundry and Detergent 洗衣量和洗衣粉量

Amount of Laundry 洗衣量	Water Level 水位	Synthetic detergent 合成洗衣劑		
		Concentrated detergent 濃縮型洗衣劑		Regular detergent 一般洗衣劑
		20g for 30L of water (Powder) 水位 30L 需 20g (粉末)	25mL for 30L of water (Liquid) 水位 30L 需 25mL (液體)	40g or 40mL for 30L of water (Powder, Liquid) 水位 30L 需 40g 或 40mL (粉末、液體)
<b>7.0kg</b> (※ AJ-S70KXP、AJ-S70KX)	<b>60L</b>	<b>40g</b> 	<b>50mL</b>	<b>80g (80mL)</b>
<b>6.5kg</b> (※ AJ-S65KXP)	<b>58L</b>	<b>39g</b> 	<b>48mL</b>	<b>77g (77mL)</b>
<b>5.0kg</b>	<b>50L</b>	<b>33g</b> 	<b>42mL</b>	<b>67g (67mL)</b>
<b>4.0kg</b>	<b>40L</b>	<b>27g</b> 	<b>33mL</b>	<b>53g (53mL)</b>
<b>3.0kg</b>	<b>35L</b>	<b>23g</b> 	<b>29mL</b>	<b>47g (47mL)</b>
<b>1.5kg</b>	<b>30L</b>	<b>20g</b> 	<b>25mL</b>	<b>40g (40mL)</b>
<b>0.5kg</b>	<b>25L</b>	<b>17g</b> 	<b>21mL</b>	<b>33g (33mL)</b>

- Please refer to the description given by the detergent manufacturer for the usage amount and the details of detergent.  
洗衣粉的使用量，詳細情況請參照洗衣粉生產廠家的說明。
- The list of detergent amount (approximate amount) in this table takes the measuring spoon in the package of concentrated synthetic detergent as benchmark. (20g detergent for 30L water)  
本表中洗衣粉量（大致用量）的表示，以濃縮合成洗衣粉包裝中的計算匙為基準。（水位 30L 使用 20g 洗衣劑）
- If laundry is only lightly stained, use only half of the amount of detergent to be used.  
如果衣物只是輕微有些髒，則洗衣粉量為上表所示值的一半為宜。
- The excessive usage of detergent brings no more cleanness but the side effect of insufficient rinsing.  
使用過多的洗衣粉並不能增加洗衣的潔淨度，相反會引起沖洗不充分而導致弊端。

### Amount of Laundry

#### 洗衣量

- Laundry load varies according to different taps, sizes and thickness of cloth. Approximate weight of laundry is shown in ( ).  
表中( )內所示的是一件衣物的大致重量。由於洗滌的衣物種類、大小、厚度各有不同，因此洗衣量也有所不同。
- When washing normal clothes, the appropriate amount of washing load is about 70 to 80 percent of the amount indicated. In case the agitator stops which indicates overload, please check and if necessary, adjust the load.  
如為一般衣物，其洗衣量為表中所示值 70%~80% 最為恰當。若攪拌停止，表示放入的衣物過多，請檢視衣物旋轉情況並予以調整。

#### Approximate amount of laundry 衣物的大致重量



Briefs (Cotton 50g)  
男用內褲（棉約 50g）



Long-sleeved vest (Cotton 150g)  
長袖內衣（棉約 150g）



Bath towel (Cotton 300g)  
浴巾（棉約 300g）



Socks (Cotton 50g)  
襪子（棉約 50g）



Blouse (Blended materials 200g)  
女式襯衣（混棉約 200g）



Pajama (Top and bottom)  
(Cotton 500g)  
睡衣（上、下）（棉約 500g）




Towel (Cotton 70g)  
毛巾（棉約 70g）



Shirt (Blended materials 200g)  
男式襯衣（混棉約 200g）



Sheet (Cotton 500g)  
床單（棉約 500g）

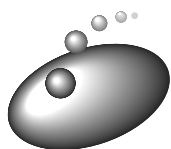

# Selection of Laundry Process













## 洗衣程序的選擇方法

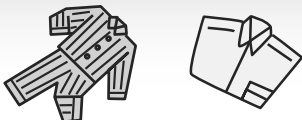 The washing machine have six laundry courses.

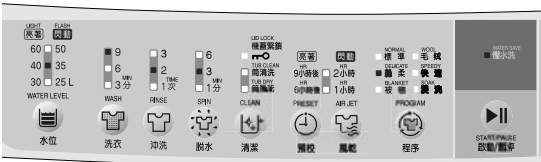Please select the appropriate detergent and course for laundry according to the table below.

本洗衣機備有 6 種洗衣程序：

請參照下表，根據衣物種類和髒污程度選擇適合的洗滌程序。

Type of laundry 衣物種類	Recommended Automatic Program 建議的全自動程序	Control Panel Display 控制面板顯示	Recommended Detergent 推薦的洗滌劑
<b>Regular laundry</b> 一般的衣物 	<b>NORMAL 標準</b> Automatically select the program suitable for washing. 以適當洗滌物的方式，進行自動洗滌。		<b>Power synthetic detergent</b> 粉末合成洗衣粉
<b>Delicate laundry</b> 精細的衣物 	<b>DELICATE 絲柔</b> Delicately wash with soft current. 利用柔和水流精心洗滌。		<b>Liquid detergent</b> 液體洗衣劑
<b>Bulky laundry</b> 大件衣物 	<b>BLANKET 被毯</b> Delicately wash with rotating current. 利用旋洗水流精心洗滌。		<b>Neutral liquid detergent</b> 液體中性洗衣劑
<b>Clothes with dry-clean or dry-clean and hard wash label</b> 有 干洗、干洗 標誌的衣物 	<b>WOOL 毛絨</b> Delicately wash with swing current. 利用回轉水流精心洗滌。		<b>Special detergent used in clothes with dry-clean label</b> 乾洗標誌衣物專用洗衣劑
<b>Clothes wearing for short period of time and without dirt</b> 短時間穿著且無污漬的衣物 	<b>SPEEDY 快速</b> Clean up laundry with fastest mode. 以最快速的方式來清洗衣物。		
<b>Heavily stained laundry</b> 嚴重污垢的衣物 	<b>SOAK 浸洗</b> Wash with special soaking current. 運用特設的運動浸泡水流進行洗滌。		<b>Power synthetic detergent</b> 粉末合成洗衣粉 <b>Liquid detergent</b> 液體洗衣劑

※ Above control panel demonstration content take AJ-S70KXP as an example.  
 以上控制面板顯示內容以 AJ-S70KXP 為例



Press "START" button  
按下啟動按鈕


### Washing 洗衣

### First Rinsing 第一次沖洗

### Second Rinsing 第二次沖洗

### Spinning 脫水

Dissolve detergent  
溶解洗衣粉  
↓  
Agitating  
攪拌



Rotating water+soaking  
旋轉水流 + 浸洗



Washing  
洗衣

Rotating water+soaking  
旋轉水流 + 浸洗



Washing  
洗衣

Agitating  
攪拌



Dissolve detergent  
溶解洗衣粉  
↓  
Agitating+soaking  
攪拌 + 浸洗



Sprinkling rinsing  
噴淋沖洗



Spinning after draining  
排水後進行脫水

When the spinning of the basket is slow, the water supply is beginning  
洗衣槽緩慢旋轉的同時,開始供水

Water-storage rinsing (twice)  
儲水沖洗(2次)




Spinning after draining  
排水後進行脫水

Supply water to the required level and performing agitating  
供水到規定水位並進行攪拌

Balanced agitating  
平衡攪拌


Draining → spinning  
排水 → 脫水



Rotating water+soaking  
旋轉水流 + 浸洗

Rinsing(twice) 沖洗(2次)

Draining → spinning  
排水 → 脫水



Rotating water+soaking  
旋轉水流 + 浸洗

Rinsing(twice) 沖洗(2次)

No Rinsing  
無沖洗

Water-storage rinsing (twice)  
儲水沖洗(2次)



Spinning after draining  
排水後進行脫水

 
Supply water to the required level and performing agitating  
供水到規定水位並進行攪拌

Balanced agitating  
平衡攪拌

Spinning after draining  
排水後進行脫水



Draining → spinning  
排水 → 脫水



spinning  
脫水

Draining → spinning  
排水 → 脫水




spinning  
脫水

Spinning after draining  
排水後進行脫水



Spinning after draining  
排水後進行脫水

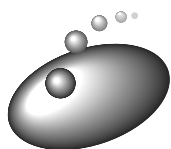

# Content of Laundry Process

## 洗衣程序的內容

### ■ This part describes the process of each process.

本部分對各洗衣程序的過程進行說明。

### ■ ( ) indicates it may be manually switched within the range contained in the bracket by pressing the buttons. No ( ) means no switch.

( )中表示用各按鈕可切換的範圍。無( )表示不能進行切換。



Process 程序	Automatic setup of water level 自動設定的水位	Washing 洗衣	Rinsing 沖洗		Spinning 脫水	Required duration (approximate) 所需時間 (大約)
			Round 1 第一次	Round 2 第二次		
NORMAL 標準	60~25L (60~25L) ※ AJ-S65KXP 58~25L (58~25L)	15min (15~3min)	Sprinkling rinsing 噴淋沖洗	Water-storage rinsing 儲水沖洗	6~3min (9~1min)	53min (68~33min)
			(Water-storage rinsing 1~3 times) (儲水沖洗1~3次) ※ AJ-S70KX(Water-storage or water-injection rinsing 1~3 times)(儲水或注水沖洗1~3次)			
DELICATE 絲柔	40L (60~25L) ※ AJ-S65KXP 58~25L (58~25L)	9min (15~3min)	Water-storage rinsing 儲水沖洗	Water-storage rinsing 儲水沖洗	3min (9~1min)	41min (74~30min)
			(Water-storage rinsing 1~3 times) (儲水沖洗1~3次) ※ AJ-S70KX(Water-storage or water-injection rinsing 1~3 times)(儲水或注水沖洗1~3次)			
BLANKET 被毯	60L (60~25L) ※ AJ-S65KXP 58~25L (58~25L)	25min	Water-storage rinsing 儲水沖洗	Water-storage rinsing 儲水沖洗	6min (9~1min)	70min (70~61min)
WOOL 毛絨	30L (35~25L)	9min	Water-storage rinsing 儲水沖洗	Water-storage rinsing 儲水沖洗	1min	36min
SPEEDY 快速	25L (35~25L)	3min (15~3min)	no rinsing 無沖洗		3min (9~1min)	12min (45~20min)
			(Water-storage rinsing 1~3 times) (儲水沖洗1~3次) ※ AJ-S70KX(Water-storage or water-injection rinsing 1~3 times)(儲水或注水沖洗1~3次)			
SOAK 浸洗	60~25L (60~25L) ※ AJ-S65KXP 58~25L (58~25L)	60min	Water-storage rinsing 儲水沖洗	Water-storage rinsing 儲水沖洗	6min (9~1min)	105min (127~90min)
			(Water-storage rinsing 1~3 times) (儲水沖洗1~3次) ※ AJ-S70KX(Water-storage or water-injection rinsing 1~3 times)(儲水或注水沖洗1~3次)			

※ The above table is based on AJ-S70KXP.

上表以 AJ-S70KXP 為基準。

### ■ Time required for washing

#### 洗衣所需時間

- The washing time includes the time of charging (volume of 15L per minute) and draining (standard condition).  
洗衣時間包括供水時間（供水量每分鐘 15L）和排水時間（標準狀態）。
- The washing time depends on the water pressure, washing quantity and drainage condition etc.  
所需時間隨水壓、洗衣量和排水條件等因素變化而變化。
- In the "NORMAL", "SOAK" processes, the washing machine determine the optimum washing mode by checking the load and texture of the washings. The time shown in the above table are ones in standard condition.(marked with ■ ).  
在『標準』、『浸洗』程序中，洗衣機通過檢測洗滌量和質地，決定最佳洗衣方式。上表所示時間為標準狀態（用 ■ 表示）下的時間。
- There are certain errors between the "washing time" & "spinning time" and the actual operation time.  
“洗衣時間”、“脫水時間”於實際運轉時間存在一定誤差。
- Some processes, the washing machine will stir the clothes for after final spinning for fluey effect. (stirring may not be made for some washing loads.)

有些程序在最終脫水結束後，會進行攪拌以理順衣物，達到疏松效果。（有的洗衣量不能進行此攪拌）

### ■ Change of the options in the processes


#### 關於更改程序內容

- ( ) indicates it may be manually switched within the range contained in the bracket by pressing the buttons.  
( )中表示用各按鈕可手動切換的範圍。
- Options in modes can't be changed after the completion of the "washing" process.  
不能在“洗衣”過程結束後更改程序內容。
- Changes can't be made during the period from the beginning of charging to the time when the level of charged water reach the stated standard.  
從供水開始到水位達到規定水位的過程中，也不能進行更改。

### ■ Switch of processes

#### 關於切換程序

- Processes can't be switched after the starting of washing machine. If it is necessary to switch, please cut off the power supply first, and then proceed with the switch.  
不能在啟動後切換程序。如需更改，請切斷電源後再進行程序切換。

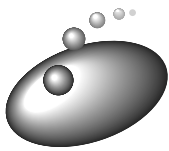

# Process Description

## 各程序的說明

### DELICATE Process

#### 絲柔程序

#### Not suitable for washing laundries below:

不宜洗滌下列衣物：

Laundries with Dry clean label and out of hand wash label.

僅有 標志而無 標志的衣物。

Laundries with fur material except for sweaters of wool (high-quality cashmere, Angora, mohair and alike)

羊毛以外的獸毛材料的衣物。(高級羊絨、安哥拉兔毛、馬海毛等)

Laundries with lace embroidery knitted by special method.

蕾絲繡花等特殊編織方法制成的衣物。

#### If laundry is only lightly stained, use only half of the amount of detergent (50%-60%).

污漬較輕的情況下，洗滌劑的使用量為通常的一半（5-6成）即可。

#### In case of laundries too wrinkle or heavy dry by spinning, please set shorter spinning time by pressing "SPIN" button.

擔心衣物因脫水出現皺褶或被過度絞干時，請按『脫水』 按鈕設定較短的脫水時間。

#### The laundry amount is below 1.2kg.

洗衣量在 1.2kg 以下。

#### After washing


洗滌結束後

**Prevent the knitted sweater and alike from distorting please pay attention when drying.**

羊毛衫等毛織品衣物，為防止其變形，晾晒時應特別注意。

- Woolen sweater can be flattened out on a lever board for drying and sunning to prevent distorting.

可將羊毛衫攤平在平整的木板  
上晾晒，以防止其變形。

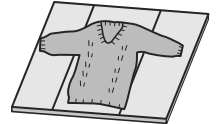

### SPEEDY Process

#### 快速程序

#### ※ This program is designed for washing clothes only with sweat but no dirt in summer.

本程序是為洗滌夏季含有汗水但無污漬的衣物而設計的專用程序。

#### ※ This program will not rinse in full automatic mode, so no detergent, fabric softener, bleach are required. If it is necessary to use them, be sure to make manual setting or select other program.

在全自動運行時，本程序將不進行沖洗，因此請勿加入洗滌劑、柔軟劑、漂白劑。如果確實有必要使用時，請進行手動設定，或選擇其他程序。

### WOOL Process

#### 毛絨程序


## Before using your machine

### 開始洗衣前

#### ■ Please note that the washing cap can be used in "WOOL" process

用『毛絨』程序洗滌衣物時，請使用洗衣蓋

- Washing without the cap may cause the laundry damage and the washing machine failure.  
不用洗衣蓋進行洗衣時，可能會造成衣物損傷及洗衣機損壞。

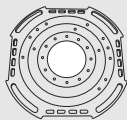

How to install and uninstall the washing cap 33


洗衣蓋的安裝和拆卸方法 33

- ※ The washing cap is the optional part  
洗衣蓋是另售部件

#### ■ The "WOOL" process applies the mode of basket rotation, which uses the rotating water in the basket to wash the fine cloth with label and the laundry with label gently.

『毛絨』程序採用洗衣槽旋轉的方式，利用槽內的旋轉水流，對有 標誌的精細衣物和有 標誌的衣物進行柔和的洗滌。

- Some laundries can't be washed due to the cloth materials.  
也有因布料原因而不能進行洗滌的衣物。
- Because this process imitates the dry cleaning that handles the laundry without external force, please remove the oil contamination, the dirt and the color spot off the laundry.  
由於本程序模仿乾洗，不使用外力對衣物進行洗滌，因此請事先除掉衣物上的油污、泥垢及色斑等。

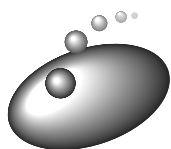

## Process Description (continued) 各程序的說明（續）

### Laundries within or out of the washing range


#### 能洗滌和不能洗滌的衣物


##### Laundries within the washing range 能洗滌的衣物

Among the signs of  
clothes' washing  
methods  
衣物的洗衣標誌中

With Hand wash label  
有  標誌的  
With Dry clean label  
有  標誌的

- The sweater, the knitted sweater (high-quality cashmere, mohair and alike)  
毛衣、羊毛衫（高級羊絨、馬海毛等）
- The trousers, the skirts  
西褲、裙子
- The overall, the shirt, the one-piece dress (silk, flax and alike)  
罩衫、襯衫、連衣裙（絲綢、麻等）
- The school uniform, the sailor uniform  
學生服、海員服

※ Even the laundry with  label may be out of the washing range.  
Please refer to "Laundries out of the washing range" at the right side.

即使有  標誌的衣物也可能不能洗滌。  
請參照右邊的“不能洗滌的衣物”。

##### Laundries out of the washing range 不能洗滌的衣物

- The leather craft or the leather decoration  
皮革製品和皮革裝飾品
- The laundries with decoration (feather, fur and alike)  
帶裝飾品（羽毛、皮毛等）的衣物
- The rayon, the amino-copper fiber and their mixture  
人造絲、銅氨纖維及其混紡物
- The laundries inclined to decolor  
易脫色衣物
- The necktie, the suit and the overcoat  
領帶、西裝和大衣
- The laundries handled with the coating process, the resin process (with bond), the grain-rolling process (with the raised or sunken patterns)  
進行了塗層加工、樹脂加工（使用黏合劑）、軋紋加工（有凹凸花紋）的衣物
- The laundries applied with the forcefully-contorted fiber (forcefully-twisted wire) such as silk and wool (especially the jacquard and alike)  
採用絲綢、羊毛等強力扭曲纖維的衣物（尤其是提花等）
- The silk, the corduroy and the alike wools  
天鵝絨、燈芯絨等毛料
- The laundries with no washing label  
沒有洗衣標籤的衣物

#### Attention 注意

- If the laundry is not included in the above list, please wash it with reference to the detergent specification.  
以上並未提及的衣物，請參照洗衣粉說明書進行洗滌。

### Preparation for the washing 洗衣的準備

#### Preparation for the laundry 衣物的準備

- Remove the color spot or the dark dirt before washing.  
衣物上有色斑或嚴重污垢時，請事先將其清除掉。
- Please fasten the fasteners or the zip of laundry completely.  
請將衣物鈕扣扣上並將拉鏈完全拉上。
- As to the laundries with fastener or broider, turn its inner side to external before washing.  
帶鈕扣或有刺繡的衣物，請先翻至內面再進行洗滌。

#### Make sure the decoloring possibility 確認有否脫色

- Please make sure the decoloring possibility of the laundry. Dip the white towel with the detergent, use it to wipe the inconspicuous part of the laundry, and observe whether the towel is attached with color. Don't wash the laundry that decolors.  
請事先確認可能脫色的衣物是否會脫色。用白色毛巾沾上洗衣液，在衣物不顯眼處用力擦拭，觀察毛巾是否染上顏色。不能對脫色的衣物進行洗滌。
- Pay particular attention to the laundries that are inclined to decolor, such as the scarf.  
圍巾等容易脫色的衣物，應特別注意。

## Make the dirt or the color spot easy to remove

### 使污垢或色斑等易於清除

#### The oil contamination around the collar or the wristband 領子或袖口處的油垢

- As to the dirt around the fringe of collar, wristband, lap or pocket, use the brush with detergent to wipe these positions hard for dirt removal.

對於領子、袖口、下擺或口袋邊緣等處污垢，可用沾上洗衣液的刷子在上述位置用力擦拭來清除。



#### The color spot 色斑

- Underlay the towel at the inner side of laundry, and use the brush with detergent to flap gently and remove the color spot.

可在衣物內面墊上毛巾，用沾上洗衣液的刷子在色斑處輕輕拍打，使色斑脫落。




## Use of detergent

### 洗衣劑的使用


#### ■ Use of detergent

##### 洗衣劑的使用

- Please use special detergent (liquid) to wash clothes with Dry clean label.

洗衣標誌中有  標誌的衣物，請用乾洗衣物專用洗衣劑(液體)進行洗滌。

- Please use neutral liquid detergent (liquid) to wash clothes with Hand washing label.

有  標誌的衣物，也可用中性洗衣劑(液體)進行洗滌。

- Please refer to the detergent specification for the usage amount of detergent.

洗衣劑使用量請參照洗衣劑說明書。

- Do not use other detergent except liquid detergent.

除液體洗衣劑外，請勿使用其他洗衣劑。

#### ■ Do not use Bleach.

##### 請勿使用漂白劑

- The bleacher is of strong alkalinity and will do harm to the clothes.

漂白劑具有強烈鹼性，會損傷布料。

As to the laundry that highly shrinks after washing, the paper model shall be prepared in advance in order to get the laundry back to the original size.

對洗滌後縮水嚴重的衣物，事先應準備好其紙樣，以便將衣物重新恢復到原有尺寸。

## After washing

### 洗衣結束後

#### ■ Drying methods

##### 晾乾方法

- Sweaters of wool, Angora and cashmere shall be laid in shady and cool place after dressing to be dried in shade.

 
羊毛、安哥拉羊毛和山羊絨等毛衣應在整形後，放置於陰涼處風乾。

- Woolen sweater can be flattened out on a level board for drying and sunning to prevent distortion.

可將羊毛衫攤平在平坦的木板上晾曬，以防止變形。

- Blouse or one-piece dress shall be dressed and hung in hanger for drying in shade.

罩衫或連衣裙應整形，掛置於衣架上風乾。



#### ■ Treatment (recovery of the shrinkage and distortion)


##### 處理方法(縮水或變形的恢復方法)

- Hover the steam flatiron over the clothes, release steam and dress the clothes.

將蒸汽熨斗輕懸於衣物上，使之噴出蒸汽並整理衣物形狀。

- After spraying sufficient steam, flatten out and dress the clothes.

充分噴過蒸汽後，按紙樣平鋪衣物並整理其形狀。

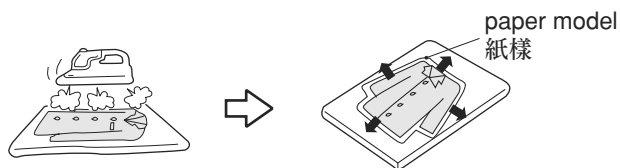

- Pre-defined operation is not available in the "WOOL" process.


“毛絨”程序不能進行預校運轉。

- Use appropriate quantity of detergent.

使用適量的洗衣劑。

Excessive consumption of detergent will lead to insufficient rinse and may do harm to the clothes.

使用過量洗衣劑會導致沖洗不充分，並有可能損傷衣物。

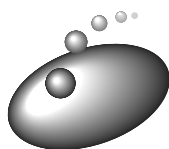

## Process Description (continued) 各程序的說明（續）

### BLANKET Process

被毯程序

### Before using your machine 開始洗滌前

- The basket rotates and creates "Blanket washing current" to gently wash comforters, blanket and bed spread.  
洗衣槽旋轉產生洗被毯水流，使被褥等物不會遭受過大的力，從而對床單、被褥、被毯進行柔和洗滌。

#### ■ Please note that washing cap can be used in BLANKET process.

『被毯』程序洗衣時，請使用洗衣蓋。


- Washing without the cap may do harm to the clothes and the washing machine.  
不用洗衣蓋，可能會造成衣物損傷及洗衣機損壞。

For installation and dismantlement of the washing cap, please see page 33.

洗衣蓋的安裝和拆卸方法 33

The washing cap is the optional part.


洗衣蓋為另售部品

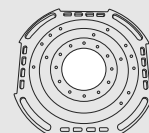

#### ■ Washable Comforter

能洗滌的被子

- Comforters filled with synthetic (polyester) fibre.  
Quilt (single, less than width 150cm X length 210cm, the weight of the batting in the quilt less than 1.8kg)  
Body-contact light quilt (dual, less than width 190cm X length 210cm, the weight of the batting in the quilt less than 1.8kg)  
內部棉絮材質為化學纖維(聚酯纖維)的被子  
被子(單人寬 150cm x 長 210cm 以下，內部棉絮重量不超過 1.8kg)  
貼身輕被(雙人寬 190cm x 長 210cm 以下，內部棉絮重量不超過 1.8kg)
- Quilt with the interior batting being feather, and with a sign of 、.  
(For example: The batt inside the close fitting comforter is 0.5kg)  
內部棉絮材質為羽毛，有 、 標誌的被子  
(例：貼身輕被內部棉絮重量為 0.5kg)

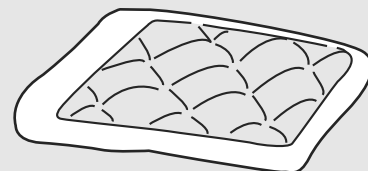

#### Attention 注意

- Don't wash the comforter with the wool as its batt material inside or the silk as its cover material.  
請勿洗滌內部棉絮材質為羊毛或被套材質為絲綢的被子。

#### ■ Washable Blanket

能洗滌的被毯

- Blankets with label  
有 標誌的被毯
- Acryl or Polyester fiber double breadth elastic blanket, looped pile carpet and woven carpet  
(less than 180cm(W) x 230cm(L) and single weight not over than 4.2kg)  
丙烯酸類或聚酯纖維的雙幅尺寸彈力被毯、毛圈被毯、編織被毯(寬 180cm x 長 230cm 以下，單件重量不超過 4.2kg)
- Please refer to operation manual of electric blanket for the washing of electric carpet  
電熱毯的洗滌請參照電熱毯使用說明書進行。



#### ■ Other Washable Items

其他能洗滌的物品

- Mattress with label  
有 標誌的床墊
- Pillow cases and cushions filled with synthetic (polyester) fibre  
有 標誌的枕頭、坐墊(內部棉絮材質為化學纖維(聚酯纖維))



## How to put in comforter and blanket 被子和被毯的放入方法

- 1 Put in the corner first, then the rest of the comforter slowly.  
從被角開始，將被子逐漸放入洗衣槽內。




- 2 To squeeze air out from the inside of the comforter put it in slowly.  
將被子內部棉絮中的空氣擠出，然後逐漸將其放入洗衣槽內。



## After the end of washing 洗衣結束後

### Method to take out 取出方法

- Opposite to the put-in sequence, pull out the comforter slowly.  
與放入時相反，應緩慢將被子拉出。

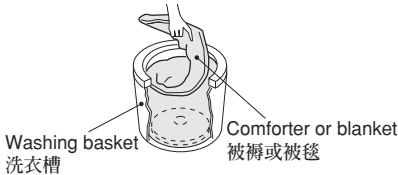

- The preset operation is not applicable to the "BLANKET" process.  
『被毯』程序不能進行預校運轉。
- Scrub away tough stains by liquid detergent prior to washing.  
被子邊緣等處有嚴重污垢時，請事先用液體洗衣劑將其清除掉。

### Natural air-jet at the place with good ventilation 在良好通風處讓其自然風乾

(About 4 hours are needed to dry the comforter in sunny days)  
(在晴天曬被子約需 4 小時)

- When drying the comforter in sun, the frequent turning-over will shorten the drying duration. When drying the comforter in sun, the frequent flap will make the comforter fluffy and comfortable.


 
晾曬被褥時，若能經常將其翻身會乾得更快。晾曬時，若能經常拍打被褥，會使棉被蓬鬆舒適。

- Neaten up the oblique batting in the quilt, make the quilt more dry, fluey and comfortable. (in order to prevent deterioration of batting and damage of quilt, please cover the coverlet to protect the quilt)


整理羽絨被中偏斜了的棉絮，可使棉被乾燥並蓬鬆舒適。(為防止羽絨變質或被子受損，請蓋上被單以保護被子)

- When the blanket is still wet, use the brush to tease the hair towards one direction, so as to keep the blanket in good looking.

趁被毯潮濕時，使用刷子將毛朝同一方向梳理整齊，使之保持美觀。

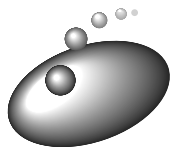


## Using the PRESET for Washing 預校時間洗衣

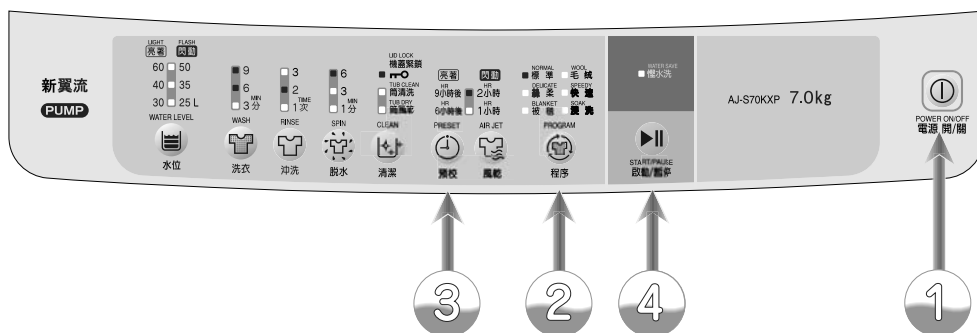

- Put the laundry in and press the "POWER SWITCH" button ①.**  
放入衣物，按下電源開關按鈕 ①。
- Press the "PROGRAM" button ②, select the washing mode.**  
按下『程序』按鈕 ②，選擇洗衣方式。  
  - With each pressing on the "PROGRAM" button, the indicator will light in sequence.  
每按動一次『程序』按鈕，各指示燈會順次點亮。
- Press the "PRESET" button ③, set the pre-defined time.**  
按下『預校』按鈕 ③，設定預定時間。  
  - Set the time it will take to finish washing from now.  
設定從現在開始多長時間後結束洗衣。
  - Predefined time can be switched by pressing the "PRESET" button.  
按下『預校』按鈕，可切換預定時間。
- Press "START/PAUSE" button ④.**  
按下『啟動/暫停』按鈕 ④。

- ★ Put in the detergent according to the amount and close the lid.  
(The sound of buzzer indicates washing completion.)  
根據顯示的水位，放入洗衣粉，關閉機蓋。  
(蜂鳴聲響起表示洗衣完畢。)
- The pulsator to detect the amount of laundry and display on the control panel. 20  
攪拌翼旋轉檢測出洗衣量並由控制面板顯示出來。 20
- For use and charging methods of the detergent, please see the detailed description of the selected mode.  
關於洗衣粉的使用方法和洗衣粉的注入方法請參照所選程序的詳細說明。
- Do not use liquid detergent during preset washing.  
預校洗衣時，請勿使用液體洗衣劑。

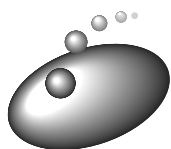


## Using the PRESET for Washing 預校時間洗衣（續）

※ Predefined operation can't be set in "WOOL", "BLANKET", "CLEAN", "AIR JET" Processes.  
『毛絨』、『被毯』、『清潔』、『風乾』程序不能設定預校運轉。

### How to use the "PRESET" button (Switched options) 預校按鈕的使用方法（切換內容）

- The preset function allows the finishing time to be set to 6 hours or 9 hours later. This feature comes in handy when you wish to do the washing while you are out or when you wish to do the washing at night and hang out in the morning.  
可將洗衣完成時間設定在6小時後或9小時後，在外出時進行洗衣，或在夜間洗衣早晨晾曬，利用本功能是相當便利的。
- Press the "PRESET" button to set the washing content.  
按下預校按鈕，設定洗衣內容。

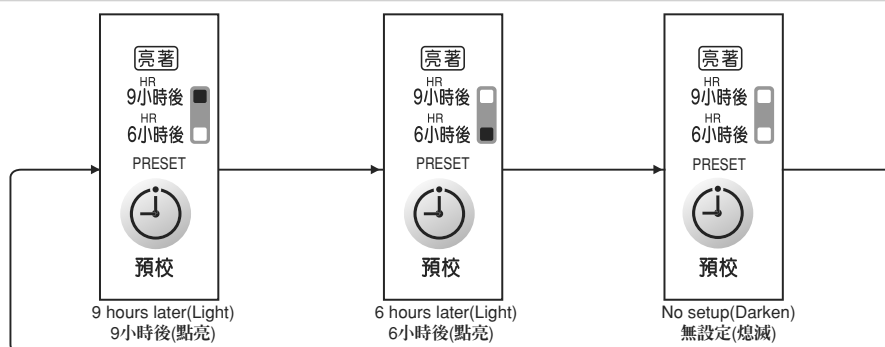


#### In the following cases 在以下情況下

- Fix the preset duration: press the "PRESET" button** (With the button pressing and holding, the preset duration will be displayed)  
確認預校內容：按下 按鈕。  
(持續按下期間，顯示預校內容)
- Cancel the preset duration: switch off the power "ON/OFF" button**.  
取消預校內容：切斷電源開關 。
- Change the preset duration: switch off the power "ON/OFF" button, and reset.**  
更改預校內容：切斷電源開關 後，重新設定。

#### Attention 注意

- In predefined operation, do not mix the clothes liable to discoloration.  
預校運轉時，請勿將容易脫色的衣物混在一起洗滌。
- With the power unplugged or cut, the preset process will be canceled.  
拔掉電源插頭或停電時，預校程序將被取消。
- The washing time varies with the change of the load and texture of the washings and the volume of the charged water.  
洗衣時間隨洗衣量和質地及供水量的變化而改變。
- To prevent the laundry from corrugating, take it out for drying as early as possible after the end of washing.  
為防止衣物起皺，洗衣結束後應盡早取出晾乾。

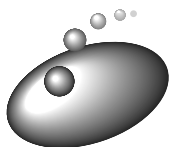


## Using the Detergent Again 再次使用洗衣液

### Use the detergent again 再次使用洗衣液

- 1** Laundry with slight dirt (不太髒的衣物). Washing only (單洗).  
"Washing" only for the 1st collective of laundries.  
對第一批衣物進行“單洗”。
- 2** Put in the 2nd collective of laundries, and select the favorite washing mode.  
放入第二批衣物，選擇喜歡的洗衣方式進行洗衣。  
• Set the proper water level for the laundries.  
設定適合衣物的水位。
- 3** Rinse and spin the 1st collective of washed laundries.  
對第一批已經洗過的衣物進行沖洗和脫水。  
• Set the proper water level for the laundries.  
設定適合衣物的水位。



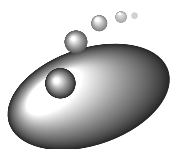

# Using the Washing Cap 使用洗衣蓋


Make sure the washing cap is used in "WOOL" or "BLANKET" process. The washing cap is the optional part.  
進行『毛絨』或『被毯』程序時，請使用洗衣蓋。洗衣蓋為另售部品。

## Installation of the washing cap

### 洗衣蓋的安裝方法

- 1** Bend the cap as is shown in the figure and then put it in the basket with the side with letter faced up.

洗衣蓋內有文字一面朝上，如圖所示將其彎曲並先放入洗衣槽內側。

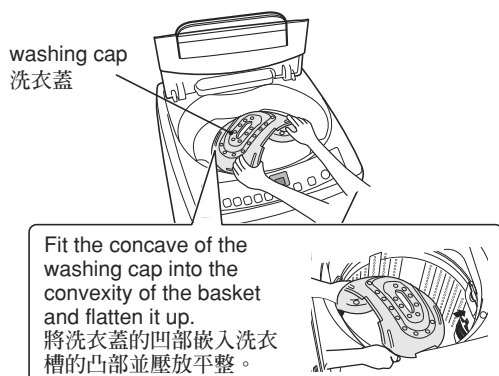


- 2** ① Press the washing cap on your side, squeeze the whole cap into the basket.

壓下身旁的洗衣蓋，將洗衣蓋整個壓入洗衣槽內。

- ② Press hard the whole washing cap down and flatten it up.

用力將洗衣蓋整個向下壓，擺放平整。

- ② Push down the whole cover 將洗衣蓋整個向下壓。 ① Push down the cover close to your body. 壓下靠近身旁的洗衣蓋。

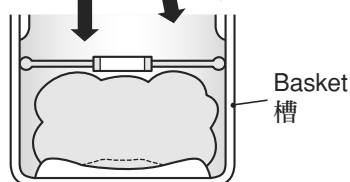

#### Attention 注意


 
- Please install the washing cap in right way to avoid unnecessary injury.  
請正確安裝洗衣蓋，避免造成不必要的傷害。

## Adjustment of the position and height of the washing cap

### 調整洗衣蓋的位置高度

#### In "WOOL" process 『毛絨』程序時


- The installation position (height) of the basket shall be determined by the type, size, and thickness of the washings. Please install the washing cap at a height where it could press against the washings slightly.  
洗衣蓋的安裝位置(高度)應根據衣物的種類、大小、厚度而定，請將洗衣蓋安裝在可輕壓住衣物的高度。
- There is a sign of protrusion on the interior wall of the basket, indicating where the installation position shall be, which can be used as reference at the time of installation.  
洗衣槽內壁上有表示安裝位置的突起標誌，安裝時可供參考。
- For light and thin clothes such as blouse, towels can be put into the basket to adjust the height of the washings and avoid oblique of the washing.  
洗滌罩衫等輕薄衣物時，可在洗衣槽內放入毛巾等物，以調節衣物高度，避免脫水時衣物偏斜。

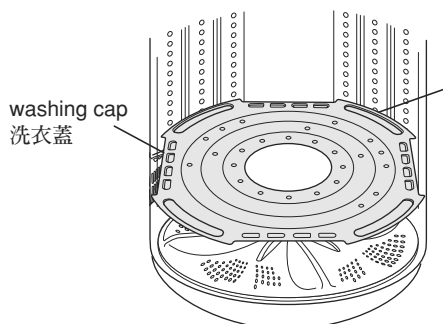

Washing waterline 洗衣水位	washing capacity 可洗衣量
35L~ 25L	less than 1.2kg 在1.2kg以下

#### Attention 注意

- Do not add any clothes on the washing cap after the installation of the cap.  
洗衣蓋安裝完畢后，請不要在洗衣蓋上再加入衣物。

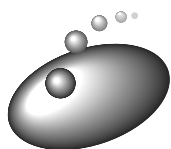


## Using the Washing Cap (continued)

### 使用洗衣蓋 (續)

#### In "BLANKET" process 『被毯』程序時

#### 1 Dismantlement of the detergent dispenser 洗衣粉加入盤的拆卸方法



- ① Bend the dispenser  
彎折加入盤。
- ② Dismantle the pin from the pinhole.  
將銷釘從銷孔中卸下來。

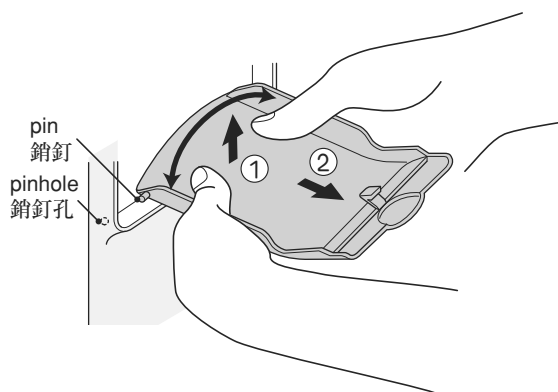

#### 2 Put the washing cap into the basket, hold the central circle, and pull it right beneath the balance ring.

把洗衣蓋放入洗衣槽內，握住中圈將其拉到平衡環正下方。

 - Do not clip the clothes when installing the washing cap.  
安裝洗衣蓋時，請勿夾住衣物。

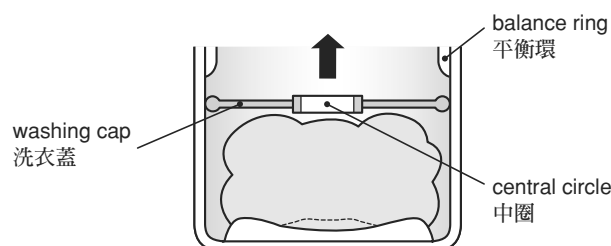

## ⚠ Attention 注意




Prohibited  
禁止

It is prohibited to install the washing cap aslant. In addition, the washing cap is prohibited from being used in other modes except the "BLANKET" and "WOOL" process.

嚴禁傾斜安裝洗衣蓋。另外，除『被毯』、『毛絨』程序外，嚴禁在其他程序中使用洗衣蓋。

- Lest the splashed water drop or the washing cap bounced out will cause body injury or damage of the washing machine.  
以免水滴飛濺或洗衣蓋飛出造成人身傷害或洗衣機損壞。

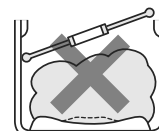


- When keeping the washing cap, please prevent it from deforming.  
保管洗衣蓋時，請注意防止其變形。
- The washing cap is a consumable good. Purchases can be made at authorized dealers.  
Refer page 52 for the optional parts.  
洗衣蓋屬於消耗品，若有損壞請到指定的商鋪購買。  
另售部品 52


## Taking out the washing cap

### 洗衣蓋的取出方法

#### 1 Push the washing cap down. 將洗衣蓋向下壓。

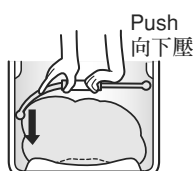


#### 2 As shown in the figure hold on to the center part and bend it to the arrow direction. 如圖抓住中圈，將洗衣蓋向箭咀方向彎曲。

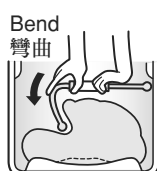

#### 3 Pull the washing cap out. 然後順勢將洗衣蓋拉起，取出。



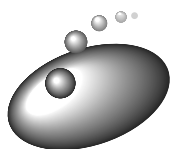

# AIR-JET Process


## 風乾程序

### Preparing for AIR-JET

#### 開始風乾前

- **Air Jet function helps to shorten the time for laundry airing by using of strong wind and high-speed spinning. It prevents shrinkage and transfigure that caused by heating.**  
風乾功能是利用強風和高速脫水，縮短衣物晾乾時間，可免除傳統熱烘式乾衣引致縮水變形的問題。
  - May be used to dry the heat-irresistible swimsuit or the underwear containing the amino heat-insulation materials.  
可對不耐熱的泳衣或含隔熱材料的內衣進行風乾。
  - Keep room free of mugginess for causing no temperature rise.  
由於溫度不上升房間不會悶熱。
- **Provide the same drying effect as the airing in the room.**  
可以達到和房間內晾乾同等的乾燥效果。
  - Maximal 2kg of blending chemical fiber can be dried in 3 hours.  
可在3小時內風乾2kg化學纖維混紡等衣物。
- **Be able to control the black mildew in the washing basket. (The process of "TUB DRY" that only dries the washing basket may be applied to prevent the mildew.)** 41  
可抑制洗衣槽中的黑色霉菌。(可利用僅風乾洗衣槽的『筒風乾』程序來防止霉菌。) 41

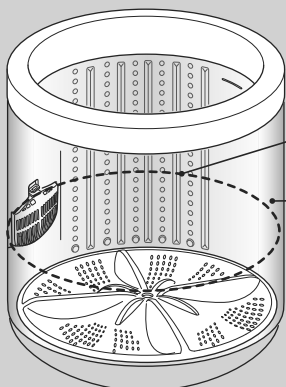

- **The drying capacity can be as high as 2kg. (Blending chemical fiber)**  
衣物最大風乾量為2kg。(化學纖維混紡)



About 2kg of laundries  
約2kg洗衣量

Hair above the filter net  
(Well rearrange the post-spinning wet laundries and put them into the washing basket)  
棉絮過濾網之上(將已脫水濕衣理順後並放入洗衣槽內)

 
- **Laundries not applicable to air-jet**  
不適宜風乾的衣物

- Comforter and blanket  
被子、被毯
- Shoes  
鞋子
- Laundries inclined to decolor  
易脫色衣物
- Laundries with the  label for washing  
洗衣標籤中有標誌的衣物
- Laundries inclined to be reshaped  
容易變形的衣物

**Excessive use of detergent may cause insufficient air-jet or unexpected corrugations.**  
洗衣量過多時會造成風乾不充分或出現較多皺紋。

**Please never handle the waterproof paper or laundries with air-jet mode.**  
請勿風乾具防水性的紙張或衣物。

- **Approximate weight of air-jet laundries**  
風乾物的大致重量



White shirt  
(blending, about 200g)  
白襯衫  
(混紡約200克)



Overall  
(blending, about 200g)  
罩衫  
(混紡約200克)



Sweater  
(chemical fiber, about 500g)  
絨布衫  
(化學纖維約500克)



Close-fitting trousers (with the amino heat-insulation materials)  
(chemical fiber, about 200g)  
緊身褲(含隔熱材料)  
(化學纖維約200克)



Washable silk  
(silk, about 200g)  
可洗的絲綢  
(絲綢約200克)



sports suit (jacket and trousers)  
(chemical fiber, about 700g)  
運動衫(上下)  
(化學纖維約700克)



Lady's shirt vest  
(with the amino heat-insulation materials)  
(chemical fiber, about 200g)  
女用襯衣背心(含隔熱材料)  
(化學纖維約200克)




Night-suit (jacket and trousers)  
(blending, about 500g)  
睡衣(上下)  
(混紡約500克)



work clothes  
(blending, about 800g)  
工作服  
(混紡約800克)

- The figure in the parentheses means the approximate weight of one piece of clothes. The weight varies according to the type, size and thickness of laundries.  
( )中的數值表示一件衣物的大致重量。該重量隨衣物種類、大小、厚度等因素的變化而有所不同。

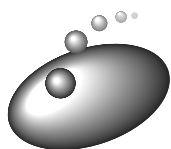


# AIR-JET Process (continued)

## 風乾程序(續)

### Air-jet Process

### 風乾方法

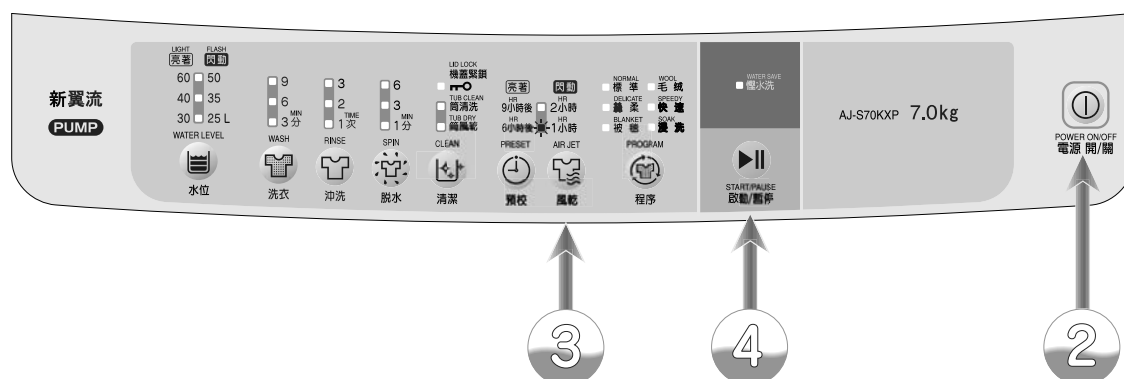

1

**Take out the laundries after washing process, rearrange them evenly and then put them into the washing basket.**

洗衣結束後，取出衣物，理順後將其平整放入洗衣槽。

- The air-jet capacity can be as high as 2kg.  
最大風乾量為 2kg。

2

**Press the "POWER SWITCH" button ①.**

按下電源開關按鈕 ①。

#### Attention 注意

- Please never forget to use the nanometer titanium filter net. ④ 45  
請務必使用納米鈦淨化網。 ④ 45

**Press the "AIR-JET" button ② to set the air-jet duration.**

按下『風乾』按鈕 ②，設定風乾時間。

3


**The duration is irrelevant to the air-jet level for applying the timer mode. The amount and type of laundries, the temperature and humidity, the season, or the installation environment may cause insufficient air-jet. Go on with the air-jet process in case of insufficient drying.**

因採用定時風乾方式，所以風乾結束時間與風乾程度無關。衣物的量和種類、氣溫濕度、季節、安裝環境等因素也可能造成風乾不充分的現象。

若出現風乾不充分，請繼續進行風乾。

- Refer to the following table for approximate air-jet duration. ④ 37  
大致的風乾時間參照下表。 ④ 37
- The preset during is only for air-jet process, and the actual operation duration is 5 to 30 minutes longer for including the duration of rearrangement and even regulation of the laundries. (Depending on the preset duration)  
設定時間僅是風乾的時間，實際運轉時間還要加上理順衣物和調整衣物平衡的時間，大概要增加 5 至 30 分鐘。(根據設定時間的變化而改變)。

#### Operation mode of air-dry process 風乾程序的運轉方式

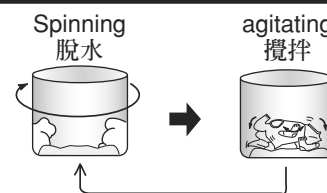

- Please prevent the washing machine from shaking when taking out the laundries. (Water may flow out from the injection opening.)  
取出衣物時，請勿使洗衣機搖晃。  
(水可能會從注入口處流出。)

**Press the "START/PAUSE" button ③. (The sound of buzzer indicates washing completion.)**

按下『啟動/暫停』按鈕 ③。  
(蜂鳴聲響起表示洗衣完畢。)

4

#### Attention 注意

- Please well rearrange the laundries before putting them into the washing basket.  
請務必將衣物理順後再放入洗衣槽內。  
Excessive or poorly-rearranged laundries may cause operation failure.  
放入衣物過多或衣物尚未理順時，可能會出現錯誤。



Please pause the operation after the operation failure, reduce the amount of laundry and correct the laundry declination or entwining, then press the "START/PAUSE" button ③. If the failure remains after repeating the above procedure 2 or 3 times, please contact an authorized service dealer.

出現錯誤後，請暫停運轉，減少衣物量並消除衣物偏斜和纏繞，然後再次按下『啟動/暫停』按鈕 ③。若反復 2 至 3 次仍出現錯誤，請與認可的維修服務店聯絡。

## Proposed Operation Time

### 建議使用時間表

■ The following information is for reference only. Air Jet Drying is only an supporting feature, helps shorten the time for laundry airing, but it can not dry your laundries completely.

以下資料只供參考，由於風乾功能僅屬輔助性質，幫助縮短晾曬衣物的時間，但不能將衣物完全乾透，衣物仍須晾乾。

Air-dry of individual laundry  
單獨風乾一種衣物時

	2.0kg	1.0kg	0.5kg
White shirt polyester fiber: 60% cotton: 40% 白襯衫 聚脂纖維：60% 棉：40%	3 hours 3小時	2 hours 2小時	90 min 90 分
Sports suit polyester fiber: 100% 運動衫 聚脂纖維：100%	60 min 60 分	60 min 60 分	60 min 60 分
Night-suit (jacket and trousers) polyester fiber: 85%, cotton: 15% 睡衣(上、下) 聚脂纖維：85% 棉：15%	2 hours 2小時	90 min 90 分	90 min 90 分
Sweater polyester fiber: 100% 絨布衫 聚脂纖維：100%	90 min 90 分	60 min 60 分	60 min 60 分
Work clothes polyester fiber: 65% cotton: 35% 工作服 聚脂纖維：65% 棉：35%	3 hours 3小時	2 hours 2小時	90 min 90 分

Air-dry of mixing laundries (about 2.0kg: 3 hours)

混合風乾幾種衣物時(約2.0kg：3小時)

Case 1: Mixture of 1.4 kg of chemical fiber and 0.4kg of blending  
60 min (1 hours) 120 min (2 hours) 180 min (3 hours)  
60分 (1小時) 120分 (2小時) 180分 (3小時)

例1：化學纖維1.4kg和混紡0.4kg的組合

Blending 混紡	400g 400克	White shirt (2) 白襯衫2件	150 min 150分
Chemical fiber 化纖	200g 200克	Overall (1) 罩衫1件	70 min 70分
	700g 700克	Sports suit (jacket and trousers) 運動衫上下	60 min 60分
	500g 500克	Sweater (1) 絨布衫1件	100 min 100分

Case 2: Mixture of 0.5kg of chemical fiber and 1.5kg of blending  
60 min (1 hours) 120 min (2 hours) 180 min (3 hours)  
60分 (1小時) 120分 (2小時) 180分 (3小時)

例2：化學纖維0.5kg和混紡1.5kg的組合

Blending 混紡	600g 600克	White shirt (3) 白襯衫3件	150 min 150分
	500g 500克	Night-suit (jacket and trousers) 睡衣上下	180 min 180分
	400g (half sleeve) 400克 短袖	Half-sleeve work clothes (jacket) 短袖工作服上	180 min 180分
Chemical fiber 化纖	200g 200克	Jacket of sports suit (1) 運動衫上1件	60 min 60分
	300g (Jacket of sports suit) 300克 (運動衫上)	Overall (1) 罩衫1件	70 min 70分

Go on with the air-dry process in case of insufficient drying.  
若出現風乾不充分，請繼續進行風乾。

• The above table provides the approximate air-dry duration, please set the actual duration in compliance with the laundry type.  
上表為大致風乾時間，請按衣物種類設定風乾時間。

1. The laundries with lining should be set with enough air-dry duration.  
應對有襯裡的衣物設定較長的風乾時間。

2. If the blending product includes a big portion of cotton, reduce the amount of laundry in one round of air-dry process or set longer air-dry duration.  
混紡制品中棉的比重較多時，應減少一次風乾中衣物的量或設定較長的風乾時間。

3. In the sensitive case of dust or pollen, please close the doors and windows before starting operation.  
對灰塵或花粉較為敏感時，請將門窗關閉後再進行運轉。

## Shorten Laundry Airing Duration


### 縮短晾曬時間

The duration to handle the laundry above 2.0kg (below 4.8kg) with 1 hour of air-jet is about 30%~40% shorter than that of airing.

對 2.0kg 以上(4.8kg 以下)衣物進行 1 小時的風乾運轉，可將晾乾時間縮短 3~4 成左右。

■ The maximal capacity applicable of shortening the laundry airing duration is 4.8kg.


可縮短衣物晾曬時間的最大處理量為 4.8kg。

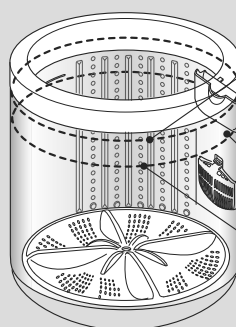

Approximate amount of 4.8kg of dried laundry (The benchmark is the upper end of stainless steel part of washing or spinning basket)  
4.8kg已乾燥衣物的大致量  
(以洗衣或脫水槽不銹鋼部分的上端為準)


Lower part of detergent injection opening  
洗衣劑注入口的下方

Approximate amount of 4.8kg of wet laundry  
4.8kg濕衣物的大致量

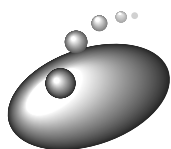

# Washing in Your Favorite Way

## 按照您喜歡的方式進行洗衣

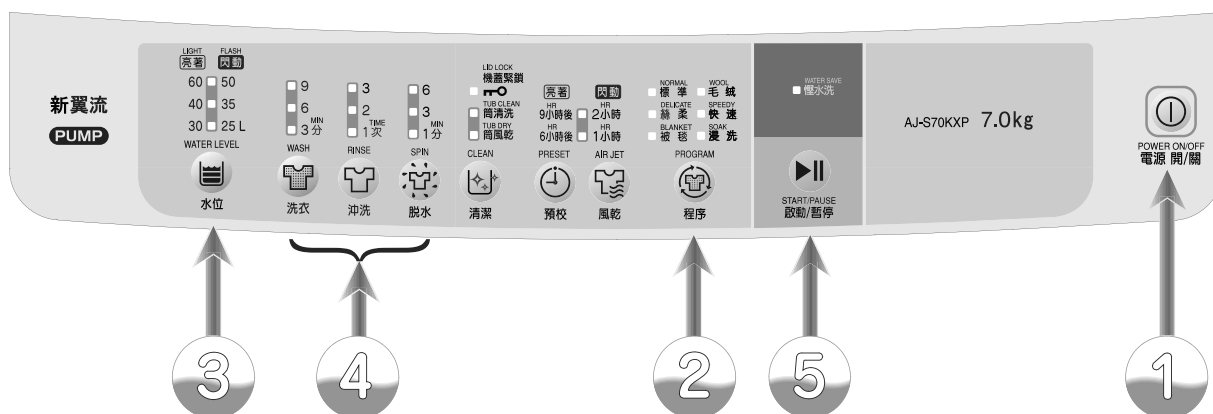

- Any of the processes of "Washing", "Rinsing" and "Spinning" can be set up alone, and the processes can also operate in combination. (The content of the washing will not be stored)
- 可以單獨設定洗衣、沖洗、脫水任何一個程序，亦可將各個程序組合運轉。(洗衣內容將不會被儲存)

### Attention 注意

- Except the "washing → rinsing → spinning" and "washing → spinning", when other washing modes are set, no stirring of the washings will be made for loosening clothes after the completion of drainage.

除“洗衣→沖洗→脫水”及“洗衣→脫水”設定外，設定其他洗衣方式時，最後排水結束後不會為疏鬆衣物而進行理衣攪拌。

### In the following cases 在下列情況下

1

2

3

4

Set washing modes by pressing the buttons  
通過各按鈕設定洗衣方式

Wash in the favorite way  
按自己喜歡的方式洗衣時  
Washing→Rinsing→Spinning  
洗衣→沖洗→脫水

Use the detergent again  
再次使用洗衣液時  
Washing only  
單洗

No need spinning after rinsing  
漂水結束後無需脫水時  
Washing→Rinsing  
洗衣→沖洗

To rinse the washed laundry  
希望將已洗過的衣物沖洗時  
Rinsing only  
只沖洗

To rinse and spin the washed laundry  
希望將已洗過的衣物沖洗並脫水時  
Rinsing→Spinning  
沖洗→脫水

To drain the water out of the washing basket or to spin before drying  
希望排出洗衣槽內的水或在晾乾前脫水  
Draining only, spinning only  
只排水，只脫水

Power  
電源



Press the  
power button  
按下電源開關



Select the  
"NORMAL" process  
選擇“標準”程序



Select the water level  
選擇水位  
The sensor will fix the water level automatically in the case of no set to water level.  
沒有設定水位時，由傳感器自動決定水位多少。




Select the water level  
選擇水位  
Automatically set to "60 L" in the case of no set to water level.  
沒有設定水位時，自動設定為「60L」。  
※AJ-S65KXP is automatically set to "58L".



Select spinning "1 min." when draining only.  
只排水時，請選擇脫水“1分鐘”進行運轉。

## How to use the "WATER LEVEL" button 水位按鈕的使用

With each pressing on the "WATER LEVEL" button, the indicator will move towards the arrow.  
每按一次水位按鈕，指示燈會沿著箭咀方向移動。

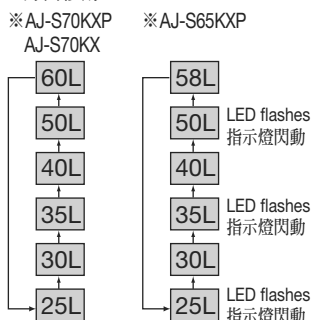

### Tips 簡要說明

When adding water during washing or rinsing process, press and hold the "WATER LEVEL" button for continuous injection of water.


(When the top water level is reached, no more water is able to be charged.)  
洗衣或沖洗過程中要加水時按下水位按鈕，持續按住即可加水。

(到達最高水位後，將無法再度加水)  
Only "25L", "30L", "35L" setting can be made in "Speedy", "WOOL" processes.

『快速』、『毛絨』儘設定25L、30L、35L。

## How to use the "WASH" button 洗衣按鈕的使用

With each pressing on the "WASH" button, the indicator will move towards the arrow.  
每按一次洗衣按鈕，指示燈會沿著箭咀方向移動。

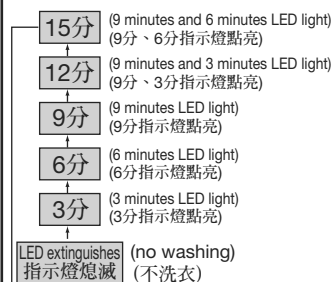

### Tips 簡要說明


※ Manual setting can't be made in "SOAK", "WOOL" and "BLANKET" processes.

在『浸洗』、『毛絨』和『被毯』程序中不能進行手動設定。


## How to use the "RINSE" button 沖洗按鈕的使用

With each pressing on the "RINSE" button, the indicator will move towards the arrow.  
每按一次沖洗按鈕，指示燈會沿著箭咀方向移動。

※ AJ-S70KXP, AJ-S65KXP

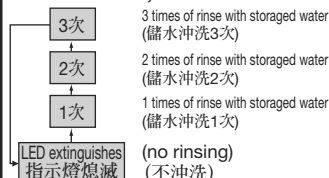

※ AJ-S70KXP

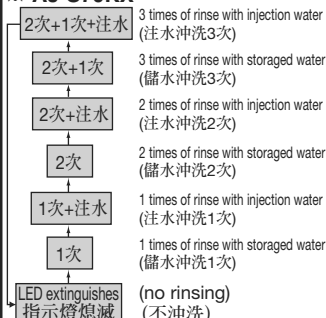

### Tips 簡要說明

※ Manual setting can't be made in "WOOL", "BLANKET" processes.  
在『毛絨』、『被毯』程序中不能進行手動設定。

## How to use the "SPIN" button 脫水按鈕的使用

With each pressing on the "SPIN" button, the indicator will move towards the arrow.  
每按一次脫水按鈕，指示燈會沿著箭咀方向移動。



### Tips 簡要說明

※ Manual setting can't be made in "WOOL" processes.  
在『毛絨』程序中不能進行手動設定。

5

End  
The buzz stands for the end of washing.  
結束  
蜂鳴聲響起表示洗衣結束




Press the  
"START/  
PAUSE" button  
按下『啟動/暫停』按鈕

Operation stops if the detergent remains.  
仍有洗衣液時停止運轉。

Operation stops if the rinse solution remains.  
仍有沖洗液時停止運轉。

Operation stops if the rinse solution remains.  
仍有沖洗液時停止運轉。

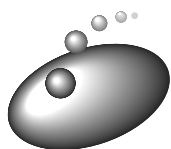

## Use Guidelines

### 使用中的注意事項

#### **Do not remove the plug of power supply during the operation.**

運轉過程中，請勿拔掉電源插頭。

- Lest the washing machine will be in trouble. Make sure the operation is suspended or the power supply is cut off before removing the plug.  
以免引起洗衣機故障。請務必暫停運轉或切斷電源開關後，再拔掉電源插頭。

#### **Do not add excessive amount of detergent.**

請勿投入過量洗衣粉。

- Excessive detergent won't improve the washing effect much.  
投入過量洗衣粉，洗衣效果並無多大改變。
- Instead, it will cause insufficient rinse and lead to some problems due to excessive foams.  
相反會造成漂洗不充分，以及因泡沫過多而引起某些問題。

#### **Don't be close to television or radio.**

請勿靠近電視機或收音機。

- It may interfere with the television or radio.  
可能會對電視機或收音機構成干擾。

#### **The power supply switch is in ineffective condition after the power supply is cut off and before the Mode LED extinguishes .**

切斷電源後，程序指示燈尚未熄滅前，電源開關處於無效狀態。

- To switch on the power supply, it is recommended to press the power supply switch again after the LED extinguishes.  
想再次接通電源時，應待指示燈熄滅後再按下電源開關。

#### **Attentions in continuous operation.**

連續運轉時應注意。

- Manually set the washing time as "12 minutes", operate the washing machine for over 3 consecutive cycles, the protective mechanism may work and stop the motor.  
手動將洗衣時間設定為“12分鐘”，連續運轉3個循環以上時，保護裝置可能會起作用而使馬達停止運轉。
- If continuous operation is necessary, please restart the operation of the washing machine after 30 minutes more or less.  
需連續運轉時，請隔30分鐘左右再讓洗衣機重新運轉。

#### **Attention on dewfall .**

結露時應注意。

- Since the humidity is high in summer, there will be dewfall outside the washing machine when washing with cool water, which may damp the floor. Please pay attention to it.  
由於夏天濕度較高，當用冷水進行洗衣時，會在洗衣機外側出現結露現象，有可能會將地板弄濕，請加以注意。

#### **Do not put in excessive clothes.**

請勿投入過多衣物。

- It may cause overflow of the clothes during washing.  
The placement of washings please see page 20.  
有可能造成衣物在洗衣過程中溢出。  
衣物的放入方法 ➤20。

#### **After final spinning, the lock-in function of the lid is unlocked, but the washing basket will remain rotating for over 15 seconds.**

最終脫水結束後，機蓋鎖緊功能被解除，但洗衣槽還會旋轉15秒以上。

- Stop use immediately and please request repair.  
立即停止使用並請僱人維修。

#### **Do not use sharp-edged article to press the buttons.**


請勿使用鋒利的物品來按按鈕。

- Lest the buttons be damaged or in trouble.  
以免造成破損或故障。

#### **When washing the thick clothes such as jersey, the oblique of the clothes in the basket is liable to cause the security problem.**

洗滌運動衫等厚衣物時，由於衣物在槽內偏斜，較易導致安全開關動作。



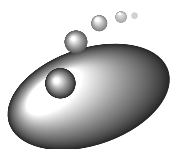

## CLEAN Process 清潔程序

### Maintenance to the washing basket (to keep it clean) ... TUB CLEAN Process 洗衣槽的保養（為保持其清潔）... 筒清洗程序

It's hard for the soap alkali residue and the mildew to adhere to the stainless steel basket, but the soap alkali residue may come into being after long usage.


Please perform the regular maintenance, and clean the washing basket bimonthly.

雖然肥皂鹼垢和霉菌很難附在不銹鋼槽內，但長時間使用後，有可能形成肥皂鹼垢。

請定期進行保養，大約2個月對洗衣槽進行一次清洗。

### Regular maintenance

#### 定期的保養

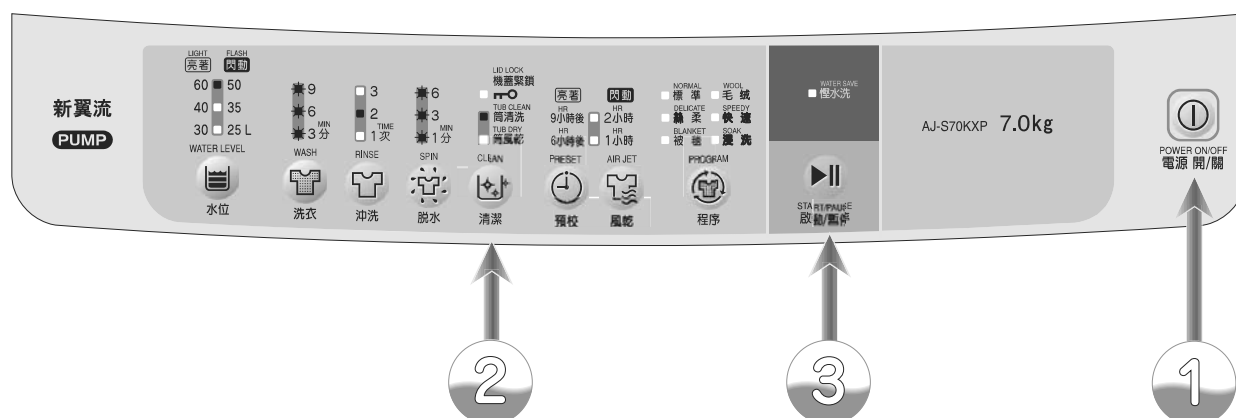

1 Press the "POWER SWITCH" button ①.  
按下電源開關按鈕 ①。

2 Press the "CLEAN" button ②, select the "TUB CLEAN" process.  
按下『清潔』按鈕 ②，選擇『筒清洗』程序。

- With each pressing on the "PROGRAM" button, the indicator will light in sequence. 每按動一次『程序』按鈕，各指示燈會順次點亮。

Press the "START/PAUSE" button ③.

3 按下『啟動/暫停』按鈕 ③。

- Final spinning is made after washing (stirring, stop) 120 min and water storage rinse 2 times. 經過洗滌（攪拌、停頓）120分 and 2次儲水沖洗，最後進行脫水。
- Please do not use regular detergent, for it will not be able to clean the basket. 請勿使用日常使用的洗衣粉，因為不能達到清洗槽的目的。
- Please do not put clothes in the basket. 請勿在洗衣槽內放入衣物。
- "WATER LEVEL", "WASH", "RINSE", "SPIN" can not be chosen. 『水位』、『洗衣』、『沖洗』、『脫水』均無法選擇。

★ Pour in detergent and close the lid.


(The sound of buzzer indicates washing completion)  
放入清洗劑，關閉機蓋。(蜂鳴聲響起表示洗衣完畢)

- The detergent is the oxidizing bleacher sell in the city. Please infuse 250g (about one bottle) bleacher. 清洗劑為市面有售的氧化型漂白劑，請在洗衣槽內倒入 250g(約1瓶)漂白劑。




TUB CLEAN process is completed.  
『筒清洗』程序完畢。

- ※ Final spinning operates for about 15minutes, can dry the basket and prevent the black mildew from being generated. 最後的脫水約運轉 20 分鐘，可對槽內進行乾燥，從而抑制黑色霉菌的產生。

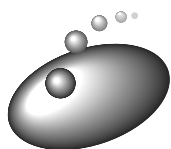

# TUB DRY Process

## 筒風乾程序

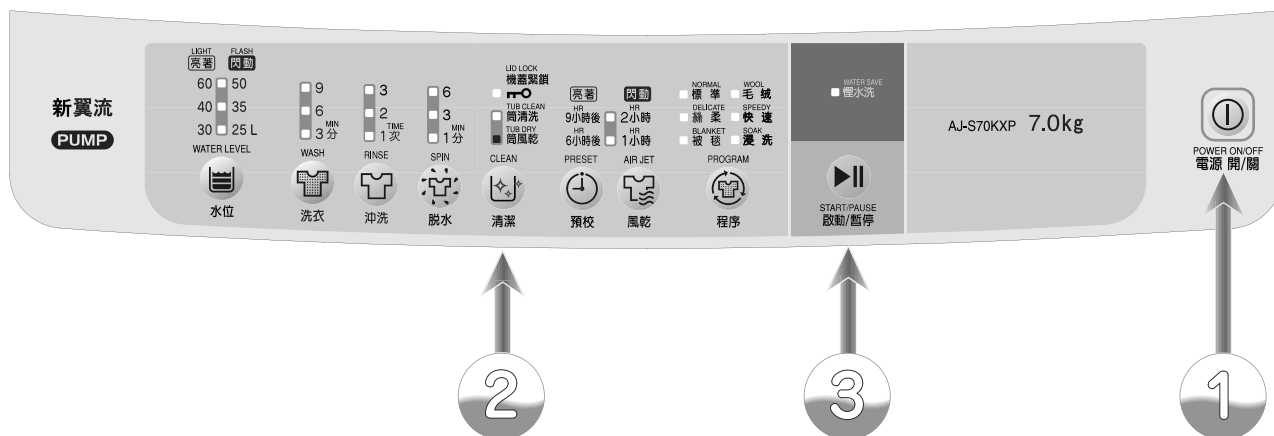

1 Press the 『POWER ON/OFF』 button .  
按下『電源』按鈕 。

• Please do not put in clothes.  
請不要放入衣物。

2 Press the 『CLEAN』 button , select 『TUB DRY』.  
按下『清潔』按鈕 , 選擇『筒風乾』。

※ Drying and spinning is about 30 minutes.  
風乾脫水約 30 分。  
※ "WATER LEVEL", "WASH", "RINSE", "SPIN"  
can not be chosen.  
『水位』、『洗衣』、『沖洗』、『脫水』均無法選擇。


3 Press the 『START/PAUSE』 button .  
按下『啟動 / 暫停』按鈕 。

(The sound of buzzer indicates the washing completes)  
(蜂鳴聲響起表示洗衣完畢)

### How to use the "CLEAN" button

#### 清潔按鈕的使用方法

Clean sequence 清潔按鈕的按下次數	Indicator light 指示燈 light 點亮	Content 內容
1 Standard Setting 基準點		<b>TUB-CLEAN</b> 筒清洗
2		<b>TUB DRY</b> 筒風乾

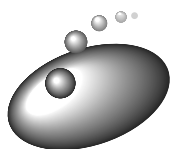

# Maintenance and Repair

## 維護保養方法


**Maintenance of the detergent dispenser (it is liable to damage during dismantlement, please pay attention to it during the operation)**  
**洗衣粉加入盤的保養(拆下時易損壞，操作時請加以注意)**

**Remove the detergent dispenser for maintenance. 21**

拆下洗衣粉加入盤進行保養。

21

- If there is detergent or softener residue, please wipe it off or flush it away with water.  
有洗衣粉或柔軟劑等物殘留時，請擦拭乾淨並用水沖洗。
- If there is severe dirt, warm water of around 40°C can be used to immerse it for five minutes, and then use the tools such as toothbrush to clean it up.  
有嚴重污垢時，可用 40 度左右的溫水浸泡 5 分鐘，然後用牙刷等工具清洗乾淨。
- Before installing the detergent dispenser, please wipe off the water attached on it.  
安裝洗衣粉加入盤前，請擦乾上面附著的水分。

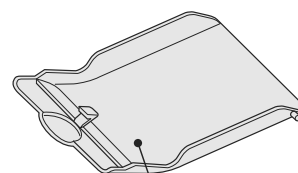

Detergent dispenser  
洗衣粉加入盤

**Maintenance of the lint filter. (It shall be performed after each time of use)**

**棉絮過濾器的保養(每次使用後都必須進行)**

**1 Press the hasp and pull it out, take out lint filter.**

按住搭扣並順勢將其拉出，取下棉絮過濾器。



**2 Remove the filter net from the encasing.**

將過濾網從外殼上拆下。



**3 Remove the filter net and clean the net. If the net is severely blocked, toothbrush can be used to eliminate the floss.**

除掉棉絮並清洗網孔。若網孔被嚴重堵塞，可用牙刷等物將棉絮清除乾淨。



**Pay attention to the rust on the washing basket**

**注意洗衣槽內的銹跡**

**The stainless basket is rustproof, but it may rust in the following cases.**

雖然不銹鋼槽具有難以生銹的性質，但在以下場合還是有可能會生銹。

- ① The rust-inclined ironwork such as the barrette or the needle remains in the basket and touches the stainless steel inner wall.  
髮夾或針等容易生銹的鐵製品留在槽內，與不銹鋼內壁接觸時。
- ② The water containing the impurities such as rust or iron power flows into the washing basket, and the impurities adhere to the stainless steel inner wall.  
混有紅銹或鐵粉等雜質的水流進洗衣槽內，從而附著在不銹鋼內壁上。

**When rusting of the basket occurs, use a sponge soaked with liquid cleanser to remove the rust.**

(See instruction label on liquid cleanser for details)

對於鐵銹，可用市面有售的乳狀清潔劑倒在海绵或布上，反復擦拭將其清除。

(詳細內容請參閱洗衣槽的使用說明)

- Please do not use metal brush to clean the washing basket lest it will damage or rust the washing basket.

請勿使用金屬刷清洗洗衣槽，以免損傷洗衣槽或使之生銹。


**To avoid rust, the followings must be ensured.**

為防止生銹，必須注意以下要點。

- Avoid water and chlorine bleach in the basket for too long.  
嚴禁水或氯類漂白劑長時間停留在洗衣槽內。



**4 Fit the angle hole of the filter net over the convexity of the encasing, then match the hasps on left and right sides. (push the protrusion of the angle hole into the encasing.)**  
將網袋角孔套進外殼凸部，然後對好左右兩邊搭扣。(將網袋的角孔突起部分推進外殼內部。)

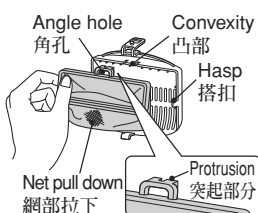

**5 Install the lint filter.**  
安裝棉絮過濾器。




- ① Insert the lower hasp of the encasing in.  
將外殼下部搭扣塞入。
- ② Press the encasing until hearing the sound of "Kacha".  
將外殼壓入，直到聽到“卡嚓”的聲音。

### Notes 備注

- The lint filter is consumable items. When damage is found in the filter net, please buy a new one at a dealer.  
棉絮過濾器屬於消耗品。網袋破損時，請往指定商鋪購買。

### Attention 注意

- When the lint filter is fetched out, please do not let the coin or barrette fall in the bottom of the washing basket.  
取出棉絮過濾器時，請勿讓髮夾或硬幣等物掉入洗衣槽底部。
- Please do not wash clothes after removing the lint filter lest it will damage the clothes.  
請勿將在棉絮過濾器拆下時洗滌衣物，以免損傷衣物。
- If lint filter is wrongly installed, the clothes or filter may be damaged during washing.  
若正確安裝棉絮過濾器，則洗衣時可能會損傷衣物或損壞過濾器。

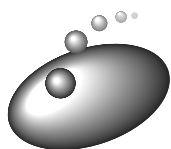


## Maintenance and Repair (continued)

### 維護保養方法（續）


#### When icing is possibly underway 有可能結冰時

- 1 Turn off the tap, and disassemble the water supply hose.  
(Refer to page 13 for proper disassembly)  
關閉水龍頭，拆下供水管。  
(拆卸方法 13)
- 2 Make the water supply hose downward, but don't bend it.  
將供水管朝下，但不能讓其彎曲。
  - Lest the water remained in the charging hose will flow out.  
以免殘留在供水管中的水流出。
- 3 Select the "TUB CLEAN" process, and the operation will stop after 30 minutes.  
選擇『筒清洗』程序，運轉 30 秒鐘後停止運作。
  - All the water remained in the charging hose can be drained.  
可將殘留在供水管中的水全部排出。
- 4 Put down the water drainage hose, place its tail in water container such as basin.  
放下排水管，將其尾部放入水盆等盛水容器中。
- 5 Only set the "Spinning" 1 minute, and operation. 42  
只設定『脫水』1 分鐘，運轉。 42
- 6 Switch off the power.  
關閉電源開關。

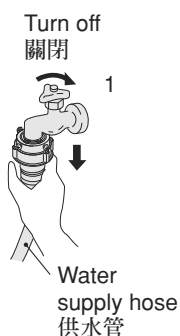


#### When icing happens 如果已經結冰時

- 1 Disassemble the water supply hose, and put it into the warm water as hot as 40°C.  
卸下供水管，將其放入 40 度左右的溫水中。
- 2 Pour the warm water as hot as 40°C into the basket.  
在槽內倒入 40 度左右的溫水。
- 3 Connect the water supply hose to the tap, and check the washing machine to make sure the water supply and drain are in normal case.  
再將供水管接至水龍頭，檢查洗衣機是否正常進行供水、排水動作。

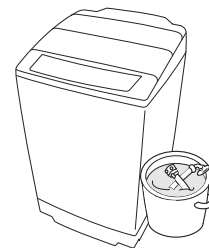


## Maintenance of nanometer titanium filter net 納米鈦淨化網的維護

- 1 Remove the filter net.  
取下淨化網支架。
  - The stains remained on inhaling window and inhaling net can be removed with a soft cloth.  
吸氣窗、吸氣網有污垢時可用軟布清潔。

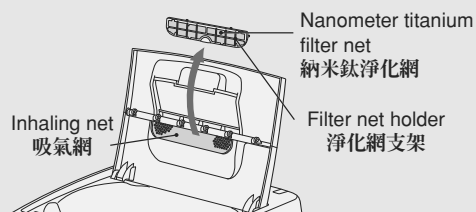


- 2 If there are stains on nanometer titanium filter net, please remove them with dust collector.  
納米鈦淨化網上有污垢時，請用吸塵器從淨化網支架上去除。

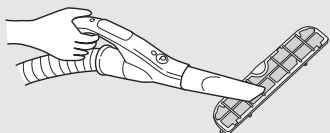

- If the stains are serious, please replace with a new nanometer titanium filter net.  
若污垢很多，建議更換新的納米鈦淨化網。

- 3 Hold the nanometer titanium filter net and release it from holder (with 6 latches)  
抓住納米鈦淨化網使它脫離淨化網支架（6 個搭扣）
  - Use a soft cloth to clean the stains on filter net holder.  
淨化網支架有污垢時可用軟布清潔。

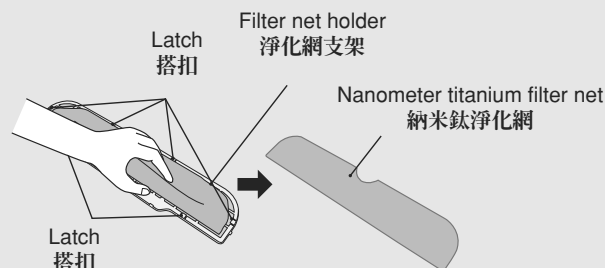

## How to maintain the water supply opening 供水口的保養

The contamination accumulated at the water supply opening will worsen the supply effect.

供水口積有髒物會影響供水效果。

### 1 Turn off the tap, and disassemble the water supply hose.

(Refer to page 13 for proper disassembly)


關閉水龍頭，卸下供水管。

(拆卸方法 13)

### 2 Clean up the contamination accumulated at the filtering net of water supply opening.

清除供水口濾網處積留的污物。

- If it's hard to clean up the contamination, disassemble the filtering net for easy cleanout.  
若污物不易清除時，可將濾網拆下以便清洗。

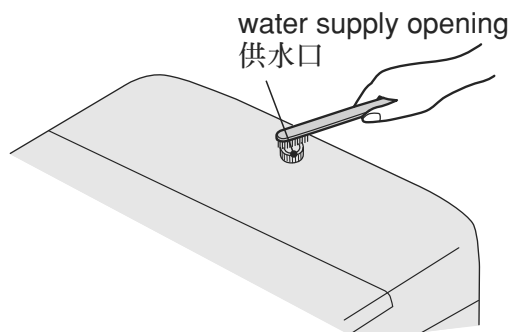

#### Attention 注意

- The filtering net of water supply opening shall be recovered to the original shape after cleanout, so as to avoid the failure of water supply valve.  
供水口濾網清洗後，請務必恢復原狀，以免引起供水閥的故障。

## Maintenance to the main unit 機體的保養

Please use the soft cloth to wipe and clean the dirt on the washing machine body and the control panel.

請用軟布將機體和控制面板上的污垢擦拭乾淨。

### Warning 警告



During the course of maintenance and repair, don't spray water directly to any part of the washing machine body.

進行保養時，請勿直接將水淋灑在洗衣機的各個部位。

- To avoid the happening of short circuit or electric shock.  
以免造成短路或觸電。

### Attention 注意

- Please don't use gasoline, thinner, detergent, alkali or weak-alkali detergent and wax to wipe the washing machine body, and please don't use brusher to wipe the body either.  
請勿用汽油、稀釋劑、清潔劑、鹼性或弱鹼性洗衣劑以及蠟等物質擦拭機體，也請勿用刷子來擦洗機身。
- When using the chemical duster cloth, please refer to its user manual.  
使用化學抹布時請遵照其使用說明。
- Remove any detergent touching the lid or other plastic components, otherwise it will damage the washing machine body after long remaining.  
清潔劑沾至機蓋等塑料部件時，應立即擦除，否則長時間會損傷機身。



### Warning 警告




Tap shall be closed first before remounting the charging hose. Select "BLANKET" process, slowly open the tap after pressing the start button. (it shall be treated the same in case of long-term idleness.)

斷水後或拆掉供水管又再次裝上時，應先關閉水龍頭，選擇『被毯』程序，在按下開始按鈕後再緩慢打開水龍頭。(長時間停止也同樣處理)

- If there is residue air in the water supply hose and water drainage hose, the washing machine could be damaged by compressed air, leading to leakage or injury accident.

供水管、水管中有殘留空氣，洗衣機有可能因壓縮空氣而受損，從而造成漏水或傷害事故。

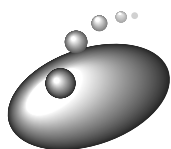

# When Failure Happens 有故障發生時

## About the abnormality alarm





 



### 關於異常警報

In the following cases, the flash of indicator and the sound of buzzer will announce the abnormality. If the washing machine generates unexpected error alarm, the washing machine shall be temporarily suspended for a while, and then restarted. If the same error alarm occurs again, please follow the following steps.




出現下列情況時，將通過指示燈的閃動和蜂鳴器聲警告知您發生異常。

但若洗衣機出現意外的錯誤警報時，應先暫停機器，然後再次啟動。

 若再次出現同樣的錯誤警報，請按以下步驟進行檢查。

Flash of indicator 指示燈閃動	Alarm content 警報內容	Part to check 檢查部位	Solution 處理方法
	<b>Fail to supply water</b> 無法供水時 <b>Fail to reach the full water level within 40 minutes or fail to reach the required level (10L) within 8 minutes</b> 經過40分鐘還無法達至滿水位，或經過8分鐘還沒有達到規定水位(10L)時	<ul style="list-style-type: none"> <li>Is the tap turned on? 水龍頭是否打開？</li> <li>Is the tap water pipe frozen or out of supply? 自來水管是否凍結或停水？</li> <li>Is the filtering net at the water supply opening blocked by contamination? 供水口濾網是否被污物堵塞？</li> <li>AJ-S70KXP, AJS65KXP whether or not hang the drain hose? AJ-S70KXP, AJS65KXP的排水管是否挂起？</li> </ul>	 Troubleshooting 排除異常  Restart operation 再次啟動運轉
 AJ-S70KXP/AJ-S65KXP  AJ-S70KX	<b>Fail to drain water</b> 無法排水時 <b>Fail to drain up water within 5 minutes</b> 經過5分鐘還無法排水完畢	<b>Check the water drainage hose</b> 請對排水管進行檢查 ※ (AJ-S70KXP/AJ-S65KXP) <ul style="list-style-type: none"> <li>Is the water drainage hose or water drainage pump blocked by silt or lint? (Drainage opening need to be checked also) 排水管或排水泵是否被泥沙或棉絮堵塞？(排水口也需檢查)</li> <li>Is the water drainage hose frozen? 排水管是否有凍結？</li> <li>Is the water drainage hose properly installed?  9~10 是否正確安裝了排水管？  9~10</li> <li>※ AJ-S70KX</li> <li>Is the water drainage hose laid down? 排水管是否被放下？</li> <li>Is the water drainage hose squeezed up? 排水管是否被壓扁？</li> <li>Is the hanging height of the water drainage hose more than 1m? 排水管挂靠高度是否超過1m？</li> <li>Is the U-shaped hose on the tail immersed in the water and blocked? 排水管尾部U型管是否浸沒於水中而被堵塞？</li> </ul>	
	<b>Stop during the spinning course</b> 脫水過程中停止	<ul style="list-style-type: none"> <li>Is the laundry laid aside? 衣物是否偏置於一側？</li> </ul>	


Please press the "START/PAUSE" button to pause the operation, rearrange the laundry evenly, and restart with the lid closed.  
請按下暫停按鈕暫停運轉，調整衣物平衡後，關閉機蓋重新啟動。

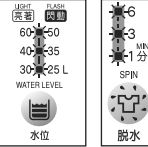
Flash of indicator 指示燈閃動	Alarm content 警報內容	Part to check 檢查部位	Solution 處理方法
	<b>The lid is not locked completely</b> (The lid is not completely closed) <b>機蓋沒有完全鎖緊</b> (機蓋沒有完全關閉時)	<ul style="list-style-type: none"> <li>Is there foreign substance under the lid? 機蓋下有異物?</li> </ul>	<b>Troubleshooting</b> 排除異常 ▼ <b>Restart operation</b> 再次啟動運轉
	<b>Washing basket can not rotate</b> (washing, rinsing, spinning) <b>洗衣槽無法旋轉</b> (洗衣、沖洗、脫水)	<ul style="list-style-type: none"> <li>Are the washings oblique? 衣物有無偏斜?</li> <li>Or is the washing machine placed straight? See page 7 洗衣機是否水平放置?  7</li> </ul>	<b>Please press the "START/PAUSE" button to pause the operation, rearrange the laundry evenly, and restart with the lid closed.</b> 請按下暫停按鈕暫停運轉，調整衣物平衡後，關閉機蓋重新啟動。
	<b>Lock of lid can not be unlocked</b> <b>機蓋鎖緊無法解除</b>	<ul style="list-style-type: none"> <li>Press "PAUSE" button, and then restart it. 按下暫停按鈕，然後重新啟動。</li> </ul>	<b>If there is still trouble, stop using the unit and request repair.</b> 若仍出錯，請停止使用並僱人修理。

- If the above abnormal alarms occur, they may be caused by outside interference. At that time, please press the PAUSE button to suspend the washing machine, then restart it. If the same alarms occur, please stop the use and request repair.
- 若出現上述之外的異常警報，有可能是由外來干擾導致。此時請按下暫停按鈕暫停運轉，然後重新啟動，若仍出現相同的異常警報，請停止使用並僱人修理。





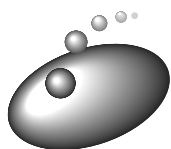


 





 

 
## Before the repair request 要求修理前

## Please recheck the following items 請再次檢查以下項目

Case 現象	Cause 原因
<b>Fail to running</b> <b>不運轉</b>	<ul style="list-style-type: none"> <li>Is power cut? 是否停電?</li> <li>Does fuse or breaker blow? 保險絲或熔斷器是否燒斷?</li> <li>Can the power plug enter the socket properly? 電源插頭是否可靠地插入電源插座?</li> <li>Is the power switch on? 電源開關是否打開?</li> <li>Is the tap turned on? 水龍頭是否打開?</li> <li>Is the "Preset washing process" set? 是否設定了“預校洗衣程序”?  31</li> <li>Whether the "START" button is pressed or not? 有無按下啟動按鈕?</li> </ul>



## When Failure Happens (continued) 有故障發生時（續）

Case 現象	Cause 原因
<b>Fail to supply water</b> 不供水 <b>No spinning, washing basket can't rotate</b> 不脫水、洗衣槽無法旋轉 <b>No stirring</b> 不攪拌	<p>Please refer to "Part to check" in "About abnormality alarm".  46 請參照“關於異常警報”中的『檢查部位』。 46</p>
<b>Unable to air-jet dry</b> 無法風乾	<ul style="list-style-type: none"> <li>• Please refer to "The Approximate air-jet duration of laundry".  37 請參照“衣物的大致風乾時間”。 37</li> </ul>
<b>It doesn't work after setting of air-jet dry</b> 設定風乾後無法工作	<ul style="list-style-type: none"> <li>• if there is water remained in the dehydrating basket, Start button can not be pressed. And it can only be pressed after draining all of the water. 脫水槽中有水積存時，就不能接受“啟動”鍵，要先進行排水，把水排光後再按“啟動”。</li> </ul>
<b>Can not open the lid</b> 機蓋打不開	<ul style="list-style-type: none"> <li>• If there is outage and shutdown during the operation, the washing machine will generate alarms and cut off the power supply. The lid is still locked. When power supply is switched on again, the lid lock will be unlocked. 電源開關是否打開？ (運轉過程中出現斷電或停電時，洗衣機將發出異常警報並自動切斷電源，機蓋仍處於鎖定狀態。再次接通電源後，機蓋鎖定將解除。)</li> </ul>
<b>Abnormal sound occurs</b> 發出異常聲音	<ul style="list-style-type: none"> <li>• Is the washing machine declining or shaky?  7 Installation Guide 洗衣機是否有傾斜或搖晃？ 7 安裝指南</li> <li>• Is any barrette or metal item mixed in the washing basket? 有無髮夾或金屬物體混入洗衣槽內？</li> </ul>
<b>No buzz at the end of washing</b> 洗衣結束後無蜂鳴聲	<ul style="list-style-type: none"> <li>• Is the buzz at the end of washing set as canceled?  18 是否已設定取消洗衣結束蜂鳴聲？ 18</li> </ul>
<b>The lid can't be opened during the operation.</b> 運轉過程中，機蓋無法打開	<ul style="list-style-type: none"> <li>• The washing machine has been set the safety protection mode during the operation. If opening the lid, please press the "START/PAUSE" button.  18 本機在運轉過程中就已經設定了安全保護模式，如要打開機蓋請按“啟動/暫停”鍵。 18</li> </ul>
<b>Water leakage</b> 漏水	<ul style="list-style-type: none"> <li>• Is the tap of proper shape?  12 水龍頭的形狀是否合適？ 12</li> <li>• Are the one touch joint and the connection nut unfastened?  12, 13 便捷連接器和連接螺母是否出現鬆動？ 12, 13</li> <li>• Is the water drainage hose inserted into the water drainage joint properly? Is the hose clipper well positioned?  9~10 排水管是否切實地插入排水接頭？軟管夾子是否夾到位？ 9~10</li> </ul>

• Except the failures mentioned above, the lid lock protector may cause cases such as stop during operation or lid unable to be opened. In such case, please unplug the power supply unit. Plug it back after 5 minutes, and then reset operation.

除了上述故障外，如發生運行中途停止或機蓋無法打開的現象，是童鎖開關保護器動作。此時，請拔下電源插頭，五分鐘後再插上，重新設定並運行即可。

※ AJ-S70KXP / AJ-S65KXP

• If all indicators turn off during operation but only the water drainage pump remains in operation, this is the auto operation of protection circuit in washing machine. This is not an error.

After water drainage pump stops, please reconnect the power supply and reassign the setting.

如果所有指示燈在運轉過程中熄滅，但只有排水泵仍在運轉，這是因為洗衣機中保護電路在自動運行。這並非故障。排水泵停止運轉後，請重新連接電源並進行設置。




## ■ Automatic power OFF 電源自動關閉功能

- The power will be cut automatically at the end of operation.  
運轉結束後，電源開關將自動切斷。
- The power will be automatically cut if the washing machine keeps one of the following status for above 1 hour.  
在下列情況中，若將洗衣機放置1小時以上，則電源開關將自動切斷。
  - 1) Pause  
暫停狀態
  - 2) Lid open  
機蓋開啟的狀態
  - 3) Abnormality alarm describer in page 46  
如同46頁的異常警報狀態
- With no pressing on "START/PAUSE" button in 5 minutes after the power on, the power will be cut automatically.  
接通電源後，若不按下啟動按鈕，則5分鐘之後電源開關將自動切斷。

## The following cases are not the failures 以下現象並非故障

Case 現象		Cause 原因	
About the water charging 關於供水	Supply water during the course of washing. 洗衣過程中供水。	<ul style="list-style-type: none"> <li>Supply water automatically if the water level drops during the course of washing. 洗衣過程中若水位下降，便會自動補水。</li> </ul>	
	The water can no be charged when starting washing form rinse. 從沖洗開始洗衣時，無法供水。	<ul style="list-style-type: none"> <li>The rinse water can only be charged after drainage and spinning. 排水和脫水之後才開始進沖洗用水。</li> </ul>	
	After connecting the water supply pipe, water will come in from the water supply opening if turning on the tap. 供水管連接後，打開水龍頭，有水從供水口處流出。	<ul style="list-style-type: none"> <li>With the application of decompression valve, the close of valve needs certain duration. 由於採用了減壓閥，閥門關閉需要一定的時間。</li> </ul>	
	The pulsator stop rotating during the charging for about 1 minutes. 供水過程中攪拌翼停止旋轉，供水停止約1分鐘。	<ul style="list-style-type: none"> <li>It may be influenced by outside interference, and it takes some time for the sensor to detect the interference. 可能受到了外來乾擾的影響，而傳感器檢測乾擾需要一定時間。</li> </ul>	
	The rotary water supply takes a longer time. 旋轉供水時間變長。	<ul style="list-style-type: none"> <li>As the water level of washing machine is too low. 這是由於洗衣机的供水量太小所引起的。</li> </ul>	
About the sound 關於聲音	"Rustle" happens as rotating the washing basket by hand. 用手轉動洗衣槽，發出“沙沙”聲音。	<ul style="list-style-type: none"> <li>The sound comes from the water flow in the liquid balance used to relieve the spinning vibration. 這是降低脫水振動的液體平衡器中水流的聲音。</li> </ul>	
	It sounds "Karcha" at the beginning of washing or spinning. 洗衣或脫水開始時發出“卡嚓”聲音。	<ul style="list-style-type: none"> <li>That is generated during the mode switch of the clutch. (the strength of the sound varies with the sound duration.) 這是離合器進行模式切換時的聲音。 (聲音大小隨發生時間而變化。)</li> </ul>	
	It buzzes during the operation. 運轉過程中發出“嗡嗡”或“嗡嗡”聲音。	<ul style="list-style-type: none"> <li>That is the electromagnetic sound of the motor switched on and off. 這是電機通斷電或電閘的電磁音。</li> </ul>	

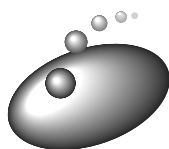


## When Failure Happens (continued) 有故障發生時（續）

Case 現象		Cause 原因	
About the sound 關於聲音	It buzzes or sounds "Hoola, hoola" during the high-speed washing or spinning. 高速洗衣或脫水過程中發出“嗡嗡”或“嘩啦嘩啦”聲音。	<ul style="list-style-type: none"> <li>That is the electromagnetic sound of the motor switched on and off to control the rotating speed. 這是為了控制脫水轉速而給電機通斷電所發出的聲音。</li> </ul>	
About the spinning 關於脫水	Supply water during the course of spinning. 脫水過程中供水。	<ul style="list-style-type: none"> <li>The security switch acts as the laundry declines. Change automatically to the "Water-storage rinse" for the next rinsing. 由於衣物偏斜導致安全開關動作的緣故。下次沖洗將自動變為儲水沖洗。</li> </ul>	
	Supply water and start rinsing during the course of spinning. 脫水過程中開始供水並沖洗。	<ul style="list-style-type: none"> <li>The security switch acts as the laundry declines. Start spinning and agitating after rinsing, and the spinning will go on after clearing the laundry declination. 由於衣物偏斜導致安全開關動作的緣故。沖洗後進行脫水和攪拌運轉，消除衣物偏斜後還會繼續脫水。</li> </ul>	
	Spin intermittently after start spinning. 脫水開始後，間歇性地脫水。	<ul style="list-style-type: none"> <li>It is because the sensor control the spinning times to improve the efficiency of spinning. 這是為提高脫水效率，由於傳感器控制脫水次數的緣故。</li> </ul>	
	The lid can't be opened even when the PAUSE button is pressed during the spinning. 脫水過程中，即使按下暫停按鈕也無法立即打開機蓋。	<ul style="list-style-type: none"> <li>When the power supply is cut off, the basket stops completely, and the lid lock will be unlocked. 當斷開電源，脫水槽完全停止下來後，機蓋鎖定將被解除。</li> </ul>	
	The power supply switch won't work right away even when the ON/OFF button is pressed during the spinning. 脫水過程中即使按下電源開關按鈕，電源開關也不會立即起作用。	<ul style="list-style-type: none"> <li>The power supply switch won't work until the basket stops the inertial rotation. 直到脫水槽的慣性旋轉停止後，電源開關才會起作用。</li> </ul>	
※AJ-S70KXP/ AJ-S65KXP About the water drainage pump 關於排水泵	During the period of water drainage, the water drainage pump start to work, and there is water drained out from the water drainage hose. 供水過程中，排水泵開始工作，排水管中有水排出。	<ul style="list-style-type: none"> <li>This is to prevent overflow. The water drainage pump starts automatically when the preset alarming level is exceeded. 這是為了防止溢水。當超過設定的預警水位時，排水泵自動啟動。</li> </ul>	
About the water level 關於水位	It sounds like asthma when the water drainage pump start to work. 排水泵排水時，有類似哮喘的聲音。	<ul style="list-style-type: none"> <li>This is because the water in the washer is going to be drained off, resulting in the entry of air into the chamber of the water drainage pump. 這是因為洗衣機中的水即將排完，使空氣進入了排水泵的腔體內。</li> </ul>	
	Relatively low water level compared with the washings load. 水位相對於洗衣量較低。	<ul style="list-style-type: none"> <li>The setting of the water level is based on the extent of the washings in the washing machine emerging out the water surface and the ability of the clothes roll up and down in the washing machine. 洗衣機以衣物稍微露出水面為依據設定水位，由攪拌翼攪拌衣物可以上下翻動。</li> <li>Since the clothes of chemical fiber is comparatively light, the water level is set accordingly low. 由於化學纖維、聚脂纖維等衣物較輕，因此水位設定也較低。</li> </ul>	
About the water level 關於水位	Relatively high water level compared with the washings load. 水位相對於洗衣量較高。	<ul style="list-style-type: none"> <li>The water level will rise during washing if the clothes being washed have been drenched or water has been charged in advance. 洗滌已濕透的衣物或洗衣槽中事先放了水時，洗衣時水位會較高。</li> </ul>	
	There are much floss. 棉絮較多時。	<ul style="list-style-type: none"> <li>If there is much floss in "NORMAL" process, the efficiency of the floss filtering can be improved by increasing the water consumption, extending washing time and setting rinse for more times. 標準程序中出現較多棉絮時，可用提高水位，延長洗衣時間和設定多次沖洗等方法提高過濾棉絮的效率。</li> </ul>	
About the lint filter 關於棉絮過濾器	There are much floss. 棉絮較多時。		
About the washing duration 關於洗衣時間	Washing doesn't finish beyond the predefined time. 超過設定時間洗衣仍未結束。	<ul style="list-style-type: none"> <li>The washing time may exceed predefined time in case of extremely small amount of charged water. 供水量很少的情況下，洗衣時間有可能超過設定時間。</li> </ul>	

Case 現象	
About the drying time 關於乾燥時間	Spinning doesn't finish beyond the predefined time. 超過設定時間乾燥仍未結束。
About the air jet processing 關於風乾程度	It is not dried. 未乾。
About the power switch 關於電源開關	The power supply switch won't work right away when transferred from switched-off to switched on. 電源開關由“斷開”轉換到“接通”時，可能不會立即起作用。
	The indicating LED won't light right away when the power supply switch is switched on. 電源開關“接通”後，指示燈不會立即點亮。
	Six processes LED light after the power supply switch is switched off. 電源開關“斷開”後，6個程序指示燈點亮。
About the lid lock 關於機蓋鎖定	It buzzes after the power supply switch is switched off. 電源開關“斷開”後，發出“嗡嗡”的聲音。
	The lid can't be opened even when the PAUSE button is pressed during the spinning. 脫水過程中，即使按下暫停按鈕也無法立即打開機蓋。
About the flavor 關於氣味	Odor of insulating varnish smells in the beginning of use. 初期使用時有氣味。
	It smells at the time of spinning. 脫水時有氣味。
Others 其他	Water comes out from the water drainage hose during first time usage. 第一次使用時，有水從排水管中流出。
	Pulsator rotates but does not display the washings load and water quantity after pressing the START button. 按下啟動按鈕後，攪拌翼轉動但沒有顯示洗衣量和水位。
	No reaction after starting. 啟動後無動作。
	There are detergent residue remained on the detergent dispenser. 洗衣粉殘留在洗衣粉加入盤。

Cause 原因	
<ul style="list-style-type: none"> <li>The predefined time is the time for drying spinning, and the actual operation time need to plus the clothes dressing and oblique correction time, which, in aggregation, will be longer than the predefined time by 5~30 minutes. 設定時間是進行乾燥脫水的時間，實際運轉時間還要加上理順衣物和糾正衣物偏斜的時間，大概比設定時間延長5至30分鐘。</li> </ul>	
<ul style="list-style-type: none"> <li>Depending on the quantities &amp; types of laundries, air temperature &amp; moisture, seasons and environment, the completion time may differ. 由衣物的數量・種類，氣溫・濕度，季節和環境決定，完成時間會變化。</li> <li>Please refer to "Approximate air-jet duration".  37 請參照“大致的風乾時間表”。 37</li> </ul>	
<ul style="list-style-type: none"> <li>The power supply switch doesn't work from the cutoff of the switch to the extinguishment of the mode LED. If the power supply is to be switched on again, please press the switch after the LED extinguish. 從切斷電源開關到程序指示燈熄滅為止，電源開關不起作用。若要再次接通電源，請待指示燈熄滅後再按下電源開關。</li> </ul>	
<ul style="list-style-type: none"> <li>The washing machine sound "Hoola, hoola" after the power supply is switched on. About 1 second later, the LED light. (since the software switch is used, the microcomputer need time for internal treatment.) 接通電源開關後，洗衣機發出“嘩嘩”的聲音，大約1秒鐘後指示燈點亮。(由於使用軟件開關，而微電腦進行內部處理需要時間)</li> </ul>	
<ul style="list-style-type: none"> <li>When switching off the power supply with clutch motor in spinning status, the clutch motor returns to washing status and the mode LED light. 離合器電機在脫水狀態下，切斷電源開關時，離合器電機回復至洗滌狀態，同時程序指示燈點亮。</li> </ul>	
<ul style="list-style-type: none"> <li>The operation stops after the power supply is switched off during the spinning, and it buzzes. That's the sound generated during switching of the modes by clutch. 脫水過程中切斷電源開關後，運轉停止並發出“嗡嗡”聲。這是離合器進行模式切換時的聲音。</li> </ul>	
<ul style="list-style-type: none"> <li>After the power supply is cut off, the spinning basket stops completely, and the lid lock will be unlocked. 當斷開電源，脫水槽完全停止後，機蓋鎖定將被解除。</li> </ul>	
<ul style="list-style-type: none"> <li>This is the odor of the insulating varnish of the motor in the beginning of use. The odor exists only at the early stage, and will disappear about perid of time after put into application. 這是初期使用時從電機中的絕緣漆產生的氣味。該異味僅存在於初期，使用一段時間後氣味會自動消失。</li> </ul>	
<ul style="list-style-type: none"> <li>Adverse drainage condition or excessive foams (due to excessive detergent) may cause too much spinning load and make the smell even more intensive. 排水條件惡劣或泡沫過多(因放入過多洗衣劑等)會造成脫水負荷過大，使得氣味更加強烈。</li> </ul>	
<ul style="list-style-type: none"> <li>Water from tests conducted by the manufacturer remains in the drainage hose. 這是工廠做性能測試時剩下的水。</li> </ul>	
<ul style="list-style-type: none"> <li>This is because the sensor can not successful detect due to the foreign interference. At that time, the power supply can be cut off and the washing machine is to be restarted. 這是由於外來乾擾的影響而導致傳感器無法正確檢測造成的。此時可切斷電源，然後再次啟動。</li> </ul>	
<ul style="list-style-type: none"> <li>This is because the washing machine is waiting for detergent or is switching the clutch. 這是由於洗衣機在等待放入洗衣劑或正在進行切換離合器。</li> </ul>	
<ul style="list-style-type: none"> <li>When the body is excessive oblique, the detergent may remain on the dispenser. Please check the obliquity of the body. 當機體過度傾斜時，洗衣粉可能會殘留在洗衣粉加入盤。請檢查機體的傾斜程度。</li> </ul>	

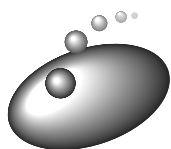


## Optional Parts 另售部件


### ■ Extended water supply hose 延長用供水管(1m/2m/3m)

- For supply hose extension.  
用於延長供水管。

### ■ Washing cap 洗衣蓋

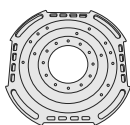


### ■ Lint filter 棉絮過濾器

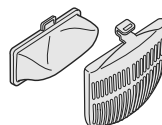

### ■ Fixing holder 排水管固定架 (AJ-S70KXP, AJ-S65KXP)



 
### ■ Nanometer titanium filter net assy 納米鈦淨化網組件



### ■ Water drainage hose 排水管(AJ-S70KXP, AJ-S65KXP)



### ■ Extended water drainage hose (about 80 cm) 延長用排水管 (約 80 cm)(AJ-S70KX) • For drainage hose extension. 用於延長排水管。

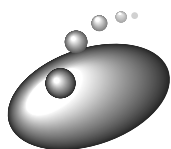

## Product Specifications 產品規格

Model 型號	AJ-S70KXP	AJ-S65KXP	AJ-S70KX
Type 種類	Fully automatic washing machine 全自動洗衣机	Fully automatic washing machine 全自動洗衣机	Fully automatic washing machine 全自動洗衣机
Power 電源	220V~50HZ	220V~50HZ	220V~50HZ
Normal washing capacity 標準洗衣容量	7.0kg (the quality of dry cloth) (乾布的質量)	6.5kg (the quality of dry cloth) (乾布的質量)	7.0kg (the quality of dry cloth) (乾布的質量)
Normal spinning capacity 標準脫水容量			
Normal water level 標準水位	60L("NORMAL"process) 60L(『標準』程序)	58L("NORMAL"process) 58L(『標準』程序)	60L("NORMAL"process) 60L(『標準』程序)
Rating power 額定功率	Washing:440W; Spinning:400W 洗滌時:440W; 脫水時:400W	Washing:440W; Spinning:400W 洗滌時:440W; 脫水時:400W	Washing:440W; Spinning:400W 洗滌時:440W; 脫水時:400W
Washing mode 洗衣方式	Automatic reverse pulsator type 自動正反攪拌方式	Automatic reverse pulsator type 自動正反攪拌方式	Automatic reverse pulsator type 自動正反攪拌方式
Pressure of tap water 自來水水壓	0.03MPa~0.8MPa (0.3kgf/cm <sup>2</sup> ~8kgf/cm <sup>2</sup> )	0.03MPa~0.8MPa (0.3kgf/cm <sup>2</sup> ~8kgf/cm <sup>2</sup> )	0.03MPa~0.8MPa (0.3kgf/cm <sup>2</sup> ~8kgf/cm <sup>2</sup> )
Profile dimension 外形尺寸	W 530mm×D 560mm×H 1020mm 寬 530mm×深 560mm×高 1020mm	W 530mm×D 560mm×H 1020mm 寬 530mm×深 560mm×高 1020mm	W 577mm×D 540mm×H 1020mm 寬 577mm×深 540mm×高 1020mm
Weight 重量	About 34kg 約 34kg	About 34kg 約 34kg	About 34kg 約 34kg



Hitachi Appliances, Inc.

No. 15-12, 2-chome, Nishi-Shinbashi, Minato-ku, Tokyo 105-8410, Japan

Tel: Tokyo ( 03 ) 3502 - 2111

3-W1333-1 J9